

# **ALPINE** **SERVICE MANUAL**

---

## **Digital Media Receiver**


**MP3**



**AAC**



**USB**  
**PLAYBACK**

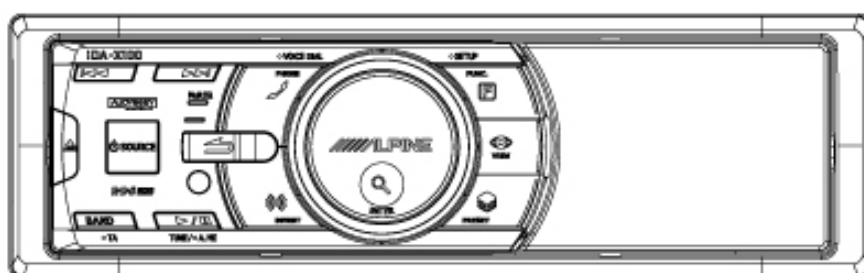

1 / 08-A  
T0110700147

---

# **iDA-X100**

# Table of Contents



Packing View	4
Packing List	5
System Connections	6
Extension Cables	8
Specification	9
Block Diagram	11
Schematic Diagram Main PCB	12
Schematic Diagram Digi PCB	16
Schematic Diagram Front PCB	21
Main PWB Foil Side	22
Main PWB Component Side	23
Digi PWB Foil Side	24
Digi PWB Component Side	25
Front PWB Foil Side	26
Front PWB Component Side	27
Exploded View	28
Electrical Parts List	29
Assembly Parts List	49

## <Cautions for Safe Repair Work>



The following cautions will prevent accidents in the workplace and will ensure safe products.

\*The symbols indicate caution is needed to prevent injuries and damage to property.



The symbols and their meanings follow.

 <b>Warning</b>	If you ignore this symbol and handle the product incorrectly or unsafely, serious injury or death may result.
 <b>Caution</b>	If you ignore this symbol and handle the product incorrectly or unsafely, injury or only material damage may result.









\*The following symbols indicate two levels of cautions.

	When you see this symbol, you have to be very careful.
	When you see this symbol, you have to follow the instructions there.


### **Warning**

 <b>Do not look squarely into the laser light coming from the pickup.</b> You may lose your sight.	 <b>Fuse Caution</b> Always use a designated fuse. Use of an incorrect fuse may result in a fire.
--	--

### **Caution**

 <b>Do not allow wiring to be caught in the screw/chassis.</b> If wiring is caught in the screw/chassis, it may cause a short circuit, resulting in a fire.	 <b>Battery Caution</b> Use the designated battery. Confirm the correct polarity and seat of the battery. An incorrect battery or an improperly connected or seated battery may result in a fire.
 <b>High Temperature Caution</b> Touching the heat sink may cause severe burns.	 <b>Designated Parts Caution</b> Look up the part list and ensure that only designated parts are used to prevent problems or accidents.
 <b>Reverse Power Supply Connections or Misconnections Caution</b> Reverse power supply connections or misconnections may cause ignition problems and smoke may result.	 <b>Wiring Caution</b> Ensure that the wiring is correct when rewiring to prevent problems with ignition/breakdown.
 <b>Soldering Caution</b> Hot solder from solder splash may cause severe burns.	 <b>Wear Gloves</b> Wear gloves to prevent electrical shocks or injury from the end face of the metal.

# Packing Method View

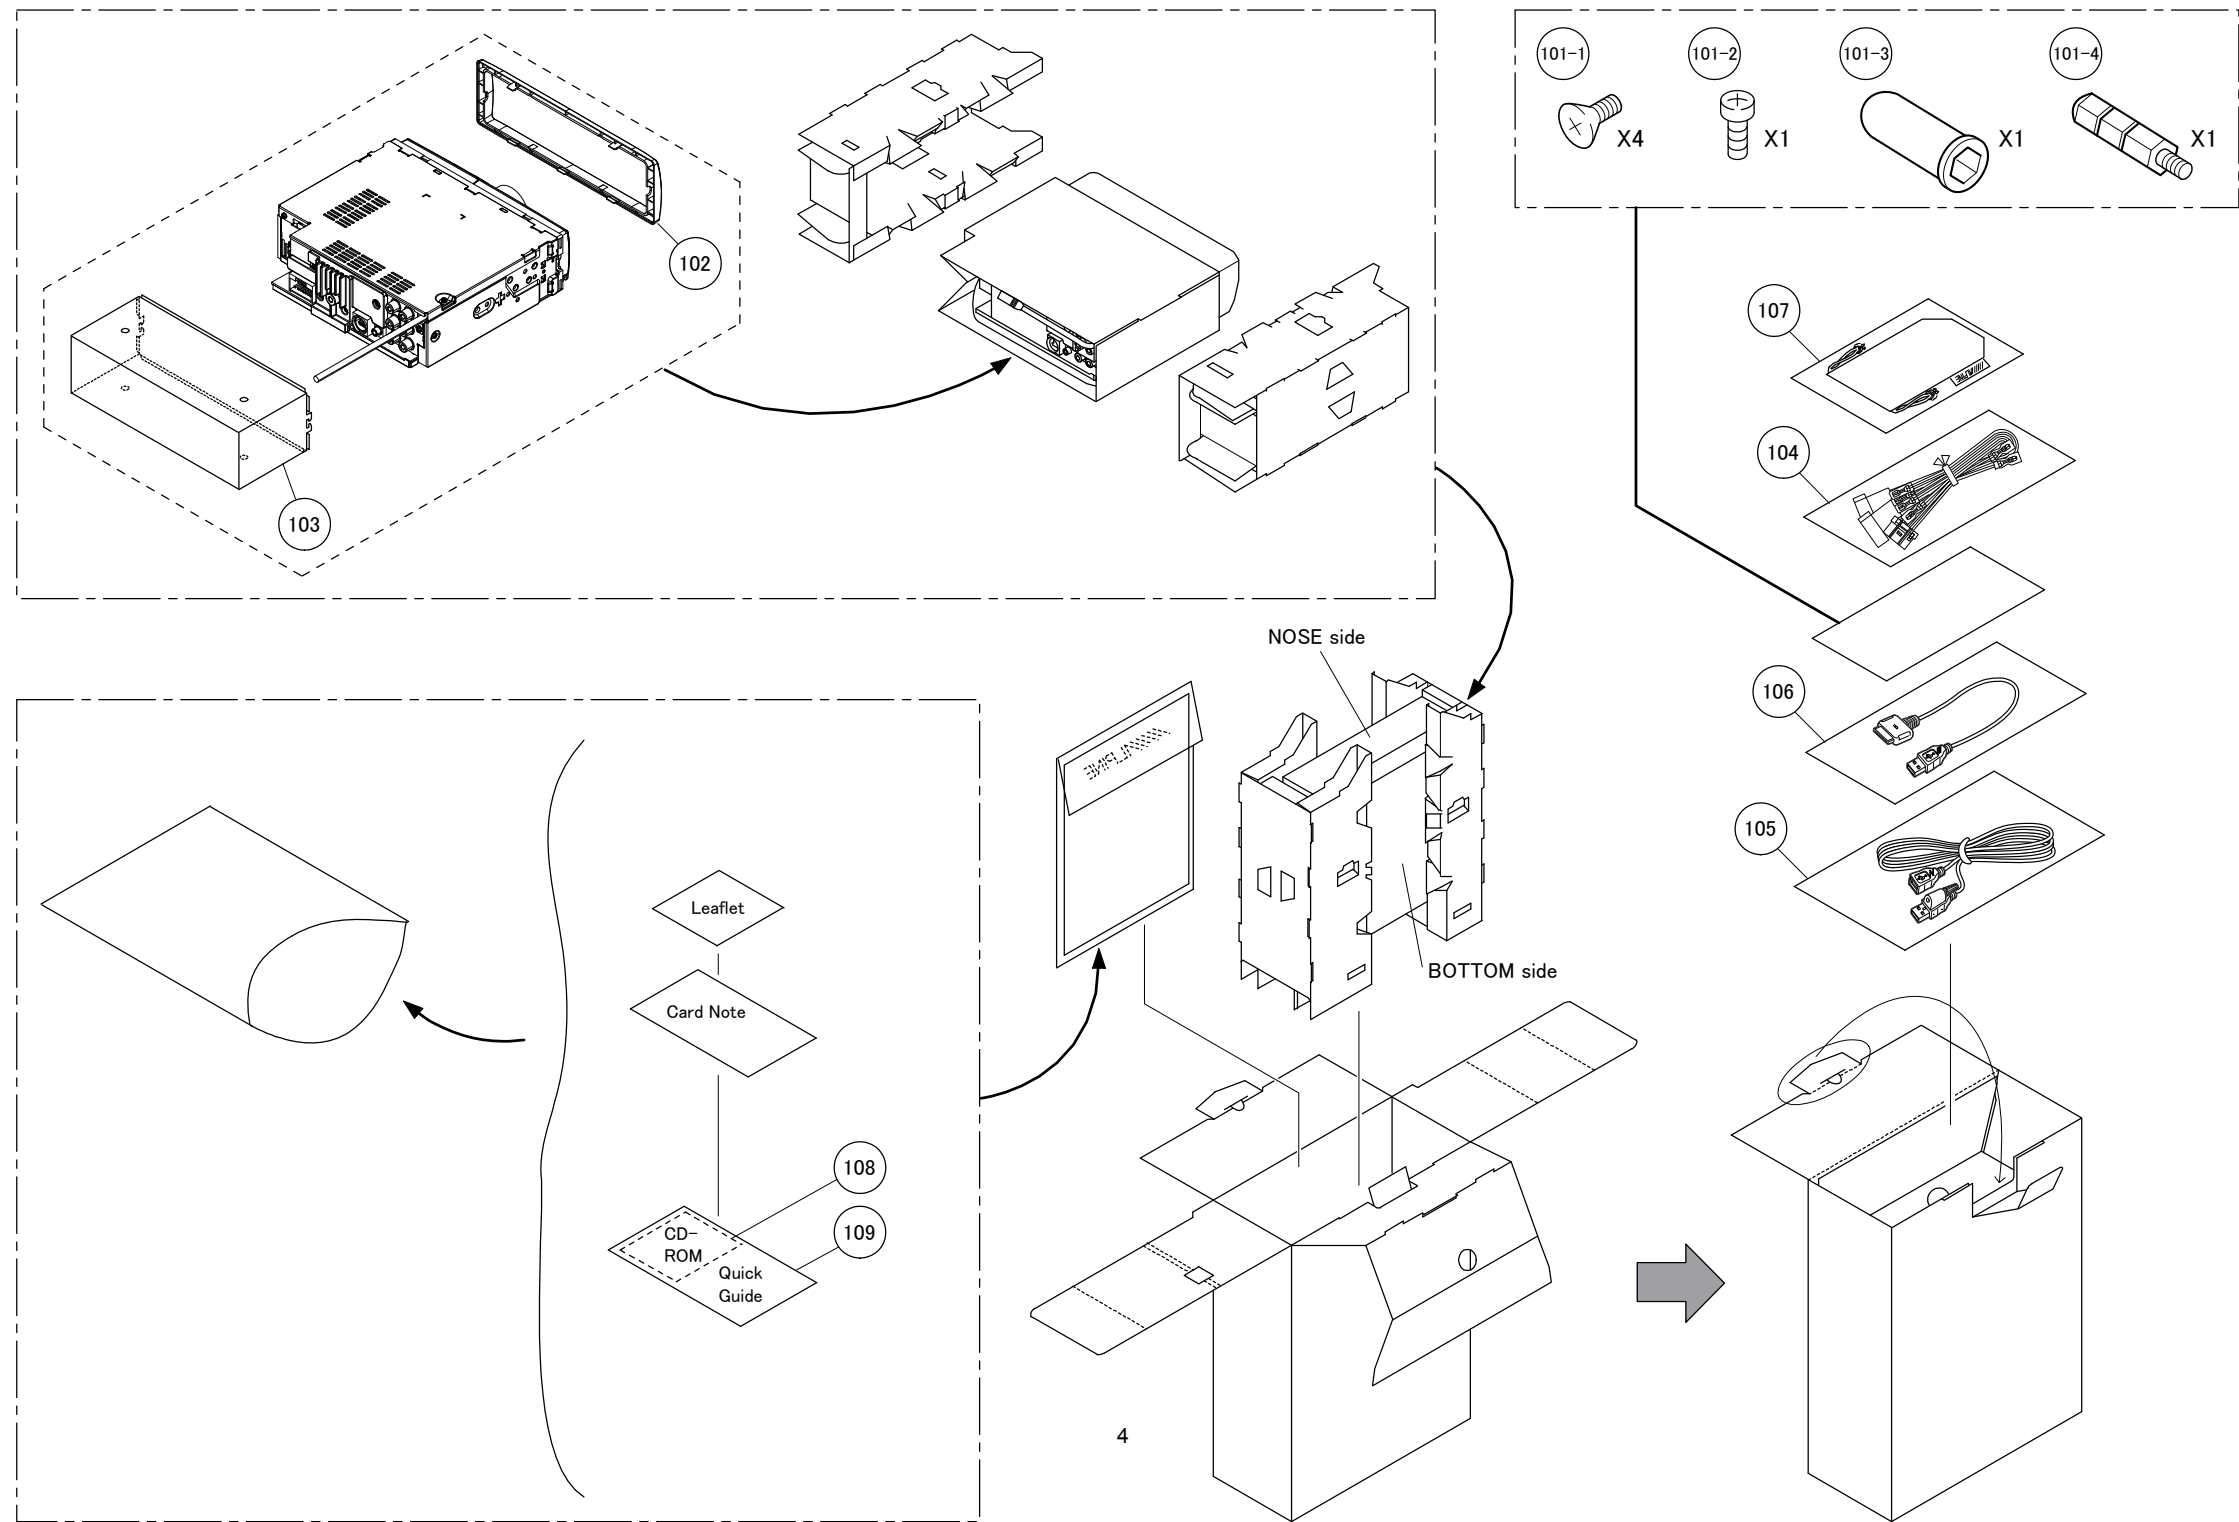



## Packing Assembly Parts List


Model Code  
iDA-X100

NOTE: The part that has not PART NUMBER will not be supplied.

MODEL	Symbol No.	Parts No.	Description
	<a href="#">101-1</a>	03S60820Y16	SCR,MCH 5X8 ZN A
	<a href="#">101-2</a>	03S60824Y01	SCR,WEV 1.7X4 ZN A
	<a href="#">101-3</a>	36A02449K01	CAP,RUBBER(A)
	<a href="#">101-4</a>	03A60836Y01	SCR,CUS 5X7 ZN A
	<a href="#">102</a>	33C04102K01	FACE,PLATE
	<a href="#">103</a>	15D00529K02	CASE,INNER
	<a href="#">104</a>	09-09396Z02	ASSY,ANIC-0031-02A
	<a href="#">105</a>	09-09243Z01	ASSY,Z0607R
	<a href="#">106</a>	09-09244Z01	ASSY,Z0617R
	<a href="#">107</a>	15-09847Z01	CARRYING,CASE
	<a href="#">108</a>	68-10334Z07	O/M-CDROM XPOD2
	<a href="#">109</a>	68-12118Z34	C/N-QRG AOEU AOTA

# System Connection

## Connections

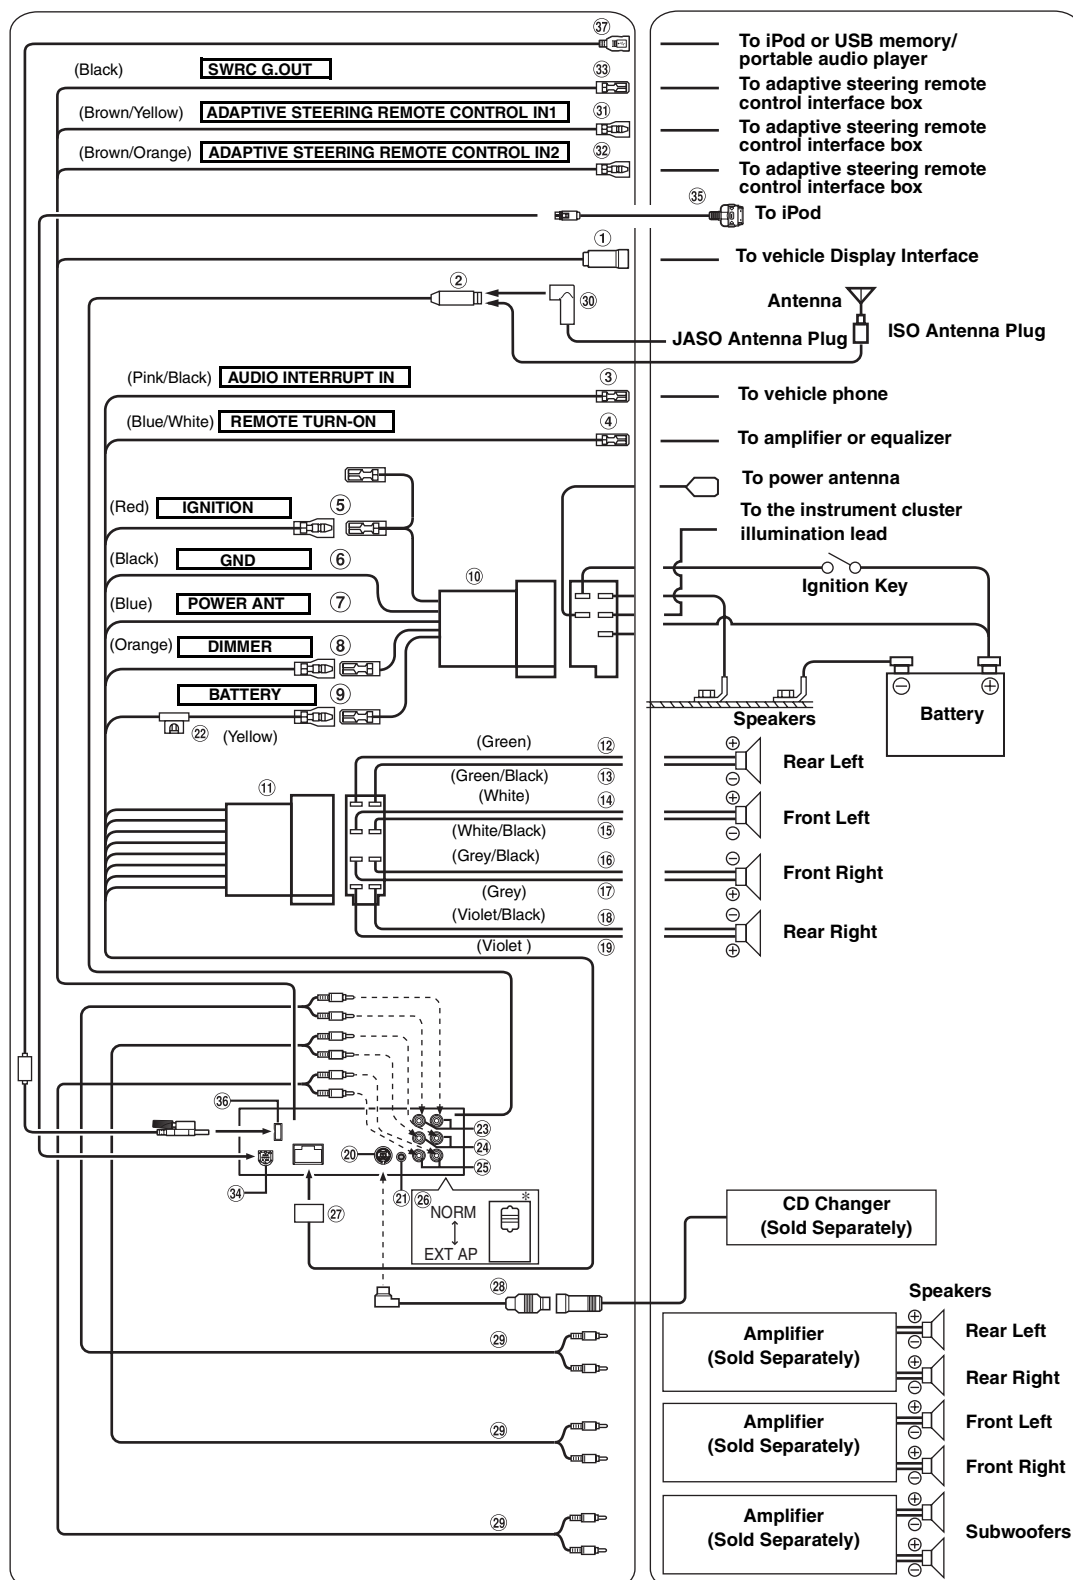

\* The system switch is located on the bottom of the unit.

**① Vehicle Display Interface Connector**

Outputs Vehicle Display Interface control signals. Connect this to the optional Vehicle Display Interface box. For details about connections, consult your nearest Alpine dealer.

**② Antenna Receptacle**

**③ Audio Interrupt In Lead (Pink/Black)**

Connect this lead to the Audio Interface output of a cellular phone which provides ground shorting when a call is received.

**④ Remote Turn-On Lead (Blue/White)**

Connect this lead to the remote turn-on lead of your amplifier or signal processor.

**⑤ Switched Power Lead (Ignition) (Red)**

Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides (+) 12V only when the ignition is turned on or in the accessory position.

**⑥ Ground Lead (Black)**

Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.

**⑦ Power Antenna Lead (Blue)**

Connect this lead to the +B terminal of your power antenna, if applicable.

**⑧ Dimmer Lead (Orange)**

This lead may be connected to the vehicle's instrument cluster illumination lead. This will enable the vehicle's dimmer control to dim the backlighting of the unit.

- *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*

**⑨ Battery Lead (Yellow)**

Connect this lead to the positive (+) post of the vehicle's battery.

**⑩ ISO Power Supply Connector**

**⑪ ISO Connector (Speaker Output)**

**⑫ Left Rear (+) Speaker Output Lead (Green)**

**⑬ Left Rear (-) Speaker Output Lead (Green/Black)**

**⑭ Left Front (+) Speaker Output Lead (White)**

**⑮ Left Front (-) Speaker Output Lead (White/Black)**

**⑯ Right Front (-) Speaker Output Lead (Grey/Black)**

**⑰ Right Front (+) Speaker Output Lead (Grey)**

**⑱ Right Rear (-) Speaker Output Lead (Violet/Black)**

**⑲ Right Rear (+) Speaker Output Lead (Violet)**

**⑳ Ai-NET Connector**

Connect this to the output or input connector of other product (CD changer, Equalizer, etc.) equipped with Ai-NET.

- *Be sure to set "Setting the Connected Head Unit (MODEL SETUP)" to "CD CHG", when the DHA-S690 is connected.*
- *Interface adapter for iPod (KCA-420i) is not recommended for use with this product.*

**㉑ Steering Remote Control Interface Connector**

To steering remote control interface box. For details about connections, consult your nearest Alpine dealer.

**㉒ Fuse Holder (10A)**

**㉓ Rear Output/Input RCA Connectors**

It can be used as Rear Output or Input RCA Connectors. RED is right and WHITE is left.

**㉔ Front Output/Input RCA Connectors**

It can be used as Front Output or Input RCA Connectors. RED is right and WHITE is left.

**㉕ Subwoofer Output RCA Connectors**

RED is right and WHITE is left.

**㉖ System Switch**

When connecting a processor using Ai-NET, place this switch in the EXT AP position. When no device is connected, leave the switch in the NORM position.

- *When the IMPRINT audio processor is connected, set to EXT AP position.*
- *Be sure to turn the power off to the unit before changing the switch position.*

**㉗ Power Supply Connector**

**㉘ Ai-NET Cable (Included with CD Changer)**

**㉙ RCA Extension Cable (sold separately)**

**㉚ ISO/JASO Antenna Adaptor (sold separately)**

An ISO/JASO antenna adaptor may be required, depending on the vehicle.

**㉛ Adaptive Steering Remote Control In 1 Lead (Brown/Yellow)**

To adaptive steering remote control interface box. For details about connections, consult your nearest Alpine dealer.

**㉜ Adaptive Steering Remote Control In 2 Lead (Brown/Orange)**

To adaptive steering remote control interface box. For details about connections, consult your nearest Alpine dealer.

**㉝ Steering Wheel Remote Control G.OUT (Black)**

To adaptive steering remote control interface box. For details about connections, consult your nearest Alpine dealer.

**㉞ Full Speed™ Connector**

Control iPod signals. Connect this to an iPod or to an optional Bluetooth Box. To use a hands-free mobile phone, an optional Bluetooth Box connection is required. For details on connection, refer to the Owner's Manual of the Bluetooth Box. You can also connect this to an external device (such as a portable audio player) by using iPod Direct/RCA Interface cable (sold separately).

**㉟ FULL SPEED™ Connection Cable (KCE-422i) (sold separately)**

**㊱ USB Connector**

Connect USB cable.

**㊲ USB cable**

Connect this to an USB memory/portable audio player or to an iPod. To use an iPod, iPod Dock interface cable connection is required.


- *Use the supplied USB cable. If a USB cable other than the supplied is used, correct performance cannot be guaranteed.*
- *Route the USB cable away from other cables.*

**To prevent external noise from entering the audio system.**

- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.

## Extension Cable

\*Always connect the Extension Cable when making checks of voltage and repair.

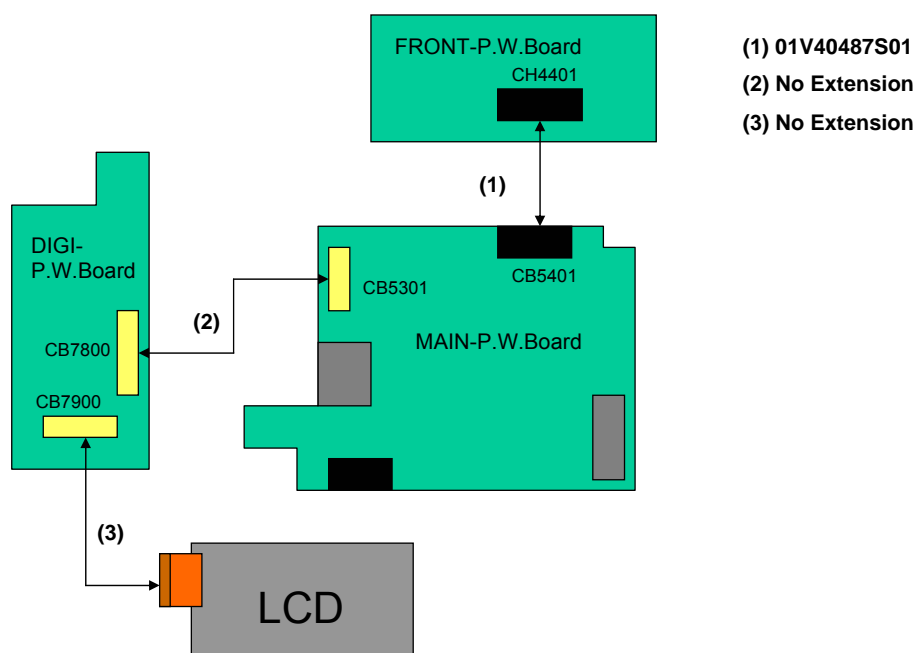

# Specifications

## < FM RADIO >

Intermediate Frequency	10.7±0.1MHz
Frequency Range	87.5~108.0MHz
Usable Sensitivity (30dB S/N, Mono, at 98.1MHz)	20.2dBf
-3dB Limiting Sensitivity (at 98.1MHz)	20.2dBf
Residual Noise (Ref. 400Hz, at 98.1MHz)	25±12dB
S/N Ratio (at 98.1MHz)	Stereo : 50dB Mono : 55dB
Image Rejection (at 106.1MHz)	50dB
IF Rejection (at 90.1MHz)	50dB
Distortion (Input 60dBμ, at 98.1MHz)	1.0%
Frequency Response (Ref. 400Hz, at 98.1MHz)	100Hz : 0±3dB 10kHz : -11±5dB
Stereo Separation (1kHz, at 98.1MHz)	20dB
PS Sensitivity (at 98.1MHz)	36.2dBf

## < MW RADIO >

Intermediate Frequency	1st : 10.7MHz 2nd : 450kHz
Frequency Range	531~1,602kHz
Usable Sensitivity (20dB S/N, at 999kHz)	36dB
S/N Ratio (at 999kHz)	44dB
Image Rejection (2nd IF, at 1,404kHz)	50dB
IF Rejection (2nd IF, at 603kHz)	40dB
Distortion (at 999kHz)	1.0%
Frequency Response (Ref. 400Hz, at 999kHz)	100Hz : -1 +3/-5dB 4kHz : -12 +6/-8dB

## < LW RADIO >

Intermediate Frequency	1st : 10.7MHz 2nd : 450kHz
Frequency Range	153~281kHz
Usable Sensitivity (20dB S/N, at 216kHz)	42dB
S/N Ratio (at 216kHz)	40dB
Image Rejection (2nd IF, at 270kHz)	40dB
IF Rejection (2nd IF, at 162kHz)	50dB
Distortion (at 216kHz)	1.5%
Frequency Response (Ref. 400Hz, at 216kHz)	100Hz : -1 +4/-5dB 4kHz : -12 +6/-8dB

## < USB Audio >

Channel Balance (1kHz)	Memory : 0±3dB
Distortion (1kHz)	Memory : 0.3% iPod : 0.3%
Frequency Response (Ref. 1kHz)	Memory : 17Hz : 0±3dB 127Hz : 0±2dB 10.007kHz : 0±2dB 19.997kHz : 0±4dB
S/N Ratio	Memory : 80dB
Separation (1kHz)	Memory : 70dB

Memory : SCD-4419 (Folder4-128kbps)  
or SCD-5100 (Folder2-128kbps)  
iPod : TCD-782 (128kbps(AAC) with iTunes)

## < CD SHUTTLE >

Channel Balance (1kHz, TCD-782)	0±3dB
---------------------------------	-------

Distortion (1kHz, TCD-782)	0.3%
Frequency Response (Ref. 1kHz, TCD-782)	17Hz : 0±3dB 127Hz : 0±2dB 10.007kHz : 0±2dB 19.997kHz : 0±4dB
S/N Ratio (TCD-782)	80dB
Separation (1kHz, TCD-782)	70dB

**< iPod Direct >** (Audio IN : 1000mVrms, 1kHz)


Channel Balance (1kHz)	0±3dB
Distortion (1kHz)	0.3%
Frequency Response (Ref. 1kHz)	20Hz : 0±3dB 120Hz : 0±2dB 10kHz : 0±2dB 20kHz : 0±4dB
S/N Ratio	80dB
Separation (1kHz)	70dB

**< GENERAL >**

Power Supply	DC14.4V
Power Output / Impedance (T.H.D.10%, USB Audio (1kHz, 0dB))	18W / ch / 4 ohm
Pre Output / Impedance (T.H.D.1%, USB Audio (1kHz, 0dB), FRONT/REAR/SUB.W (SUB.W STEP 15))	+6(2V)±2.5dBV / ch / 10k ohm
Back Up Current (ACC OFF after 1min.)	5mA
Dimensions (W x H x D)	Chassis : 178 x 50 x 156.2mm Nose : 188 x 58 x 28mm
Weight	1.0kg


NOTE : Due to Continuing product improvement, specifications and designs are subject to change without notice.


# Block Diagram

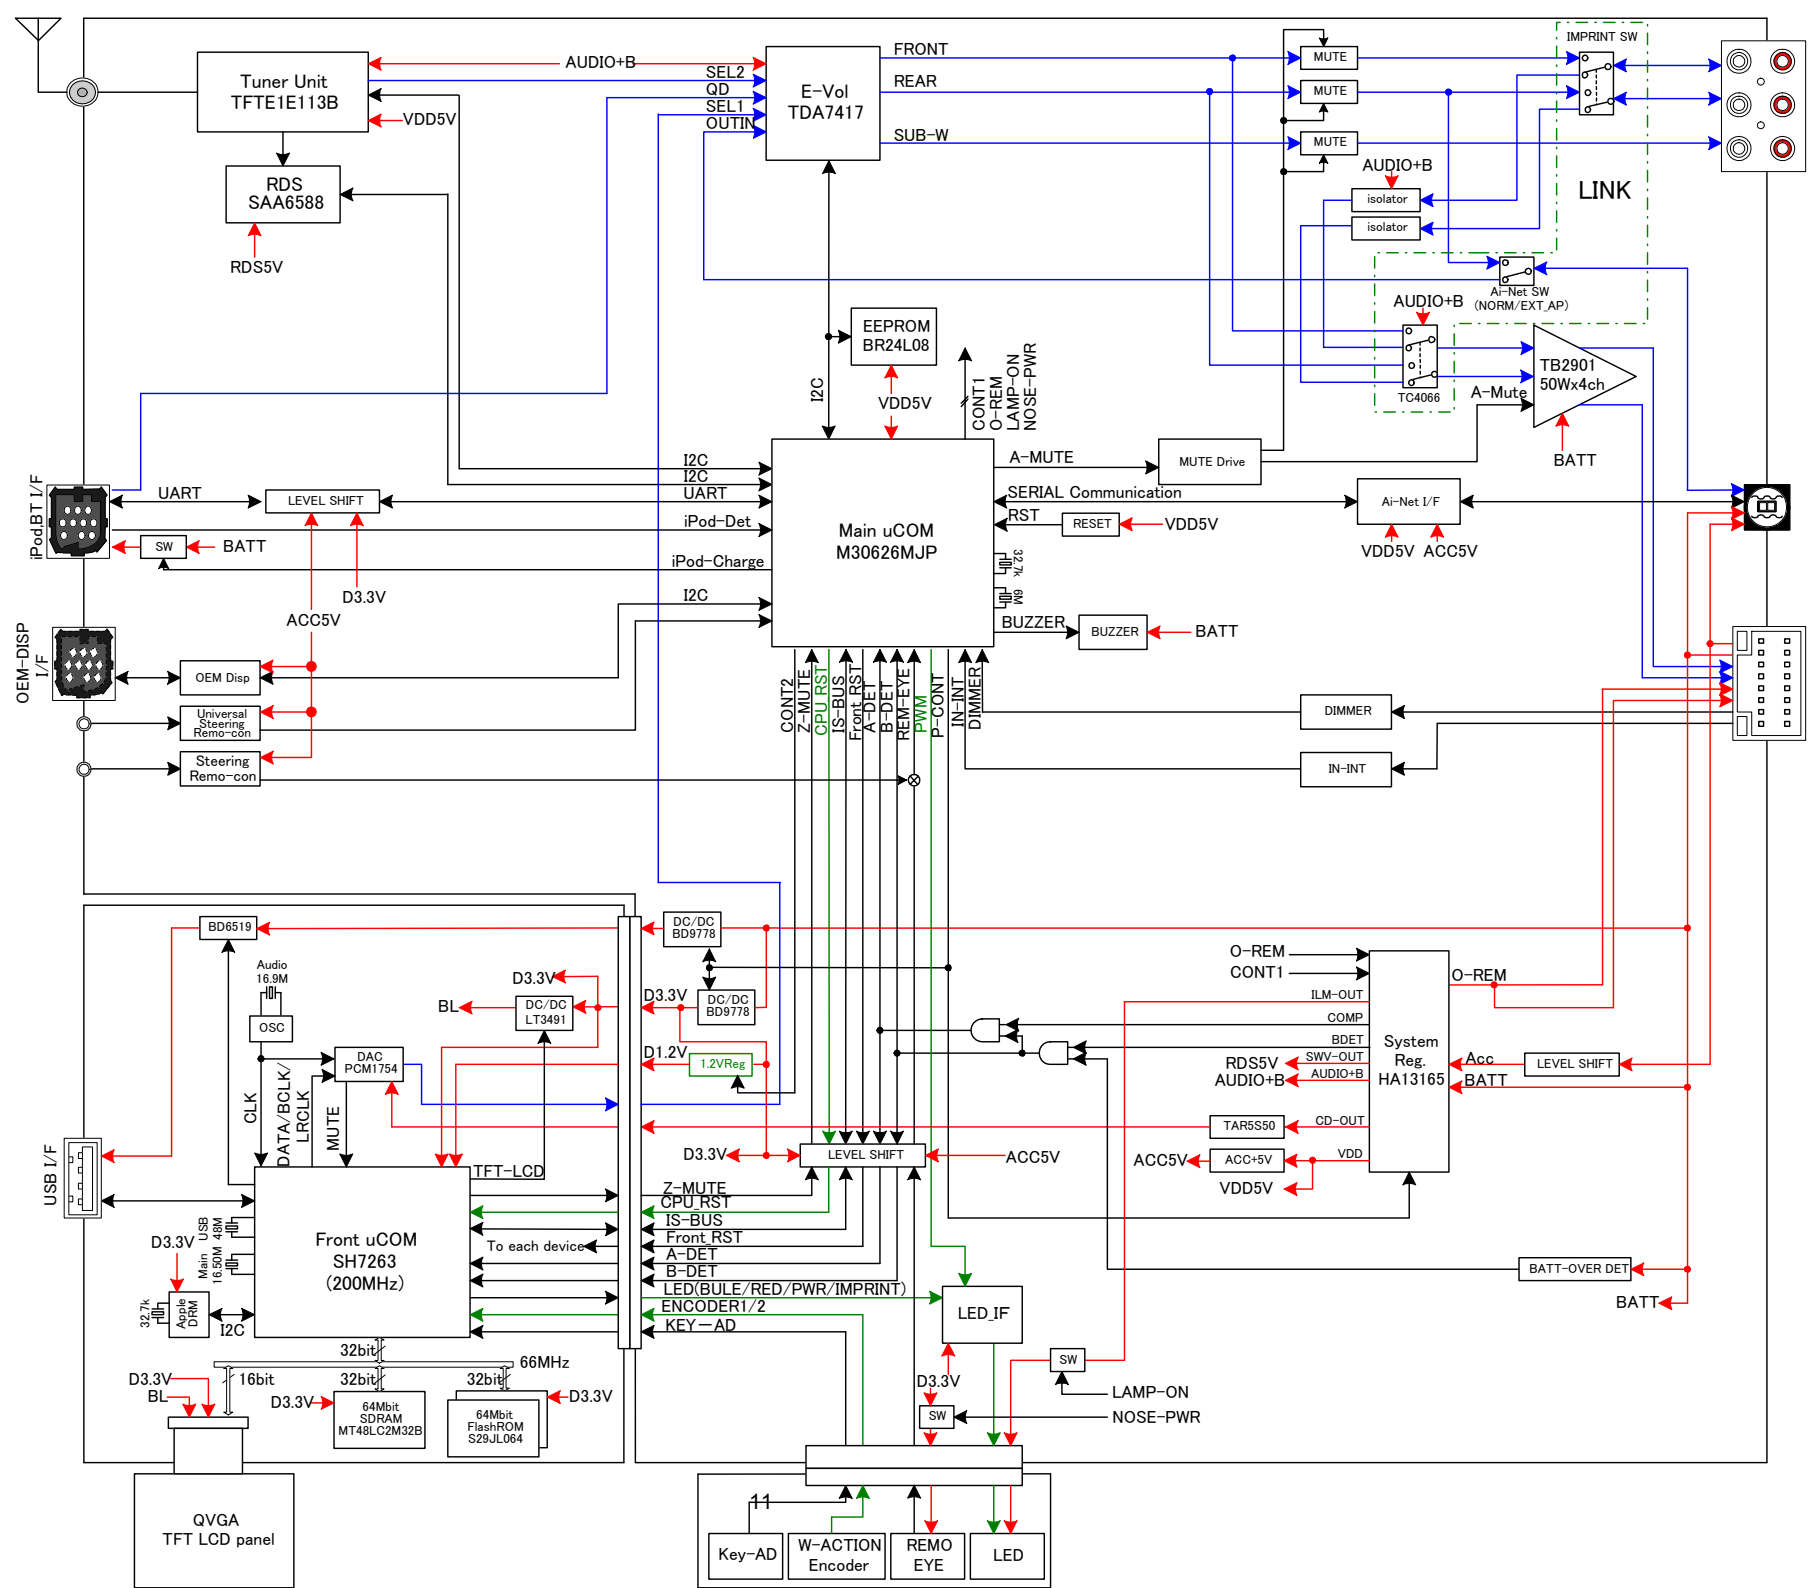









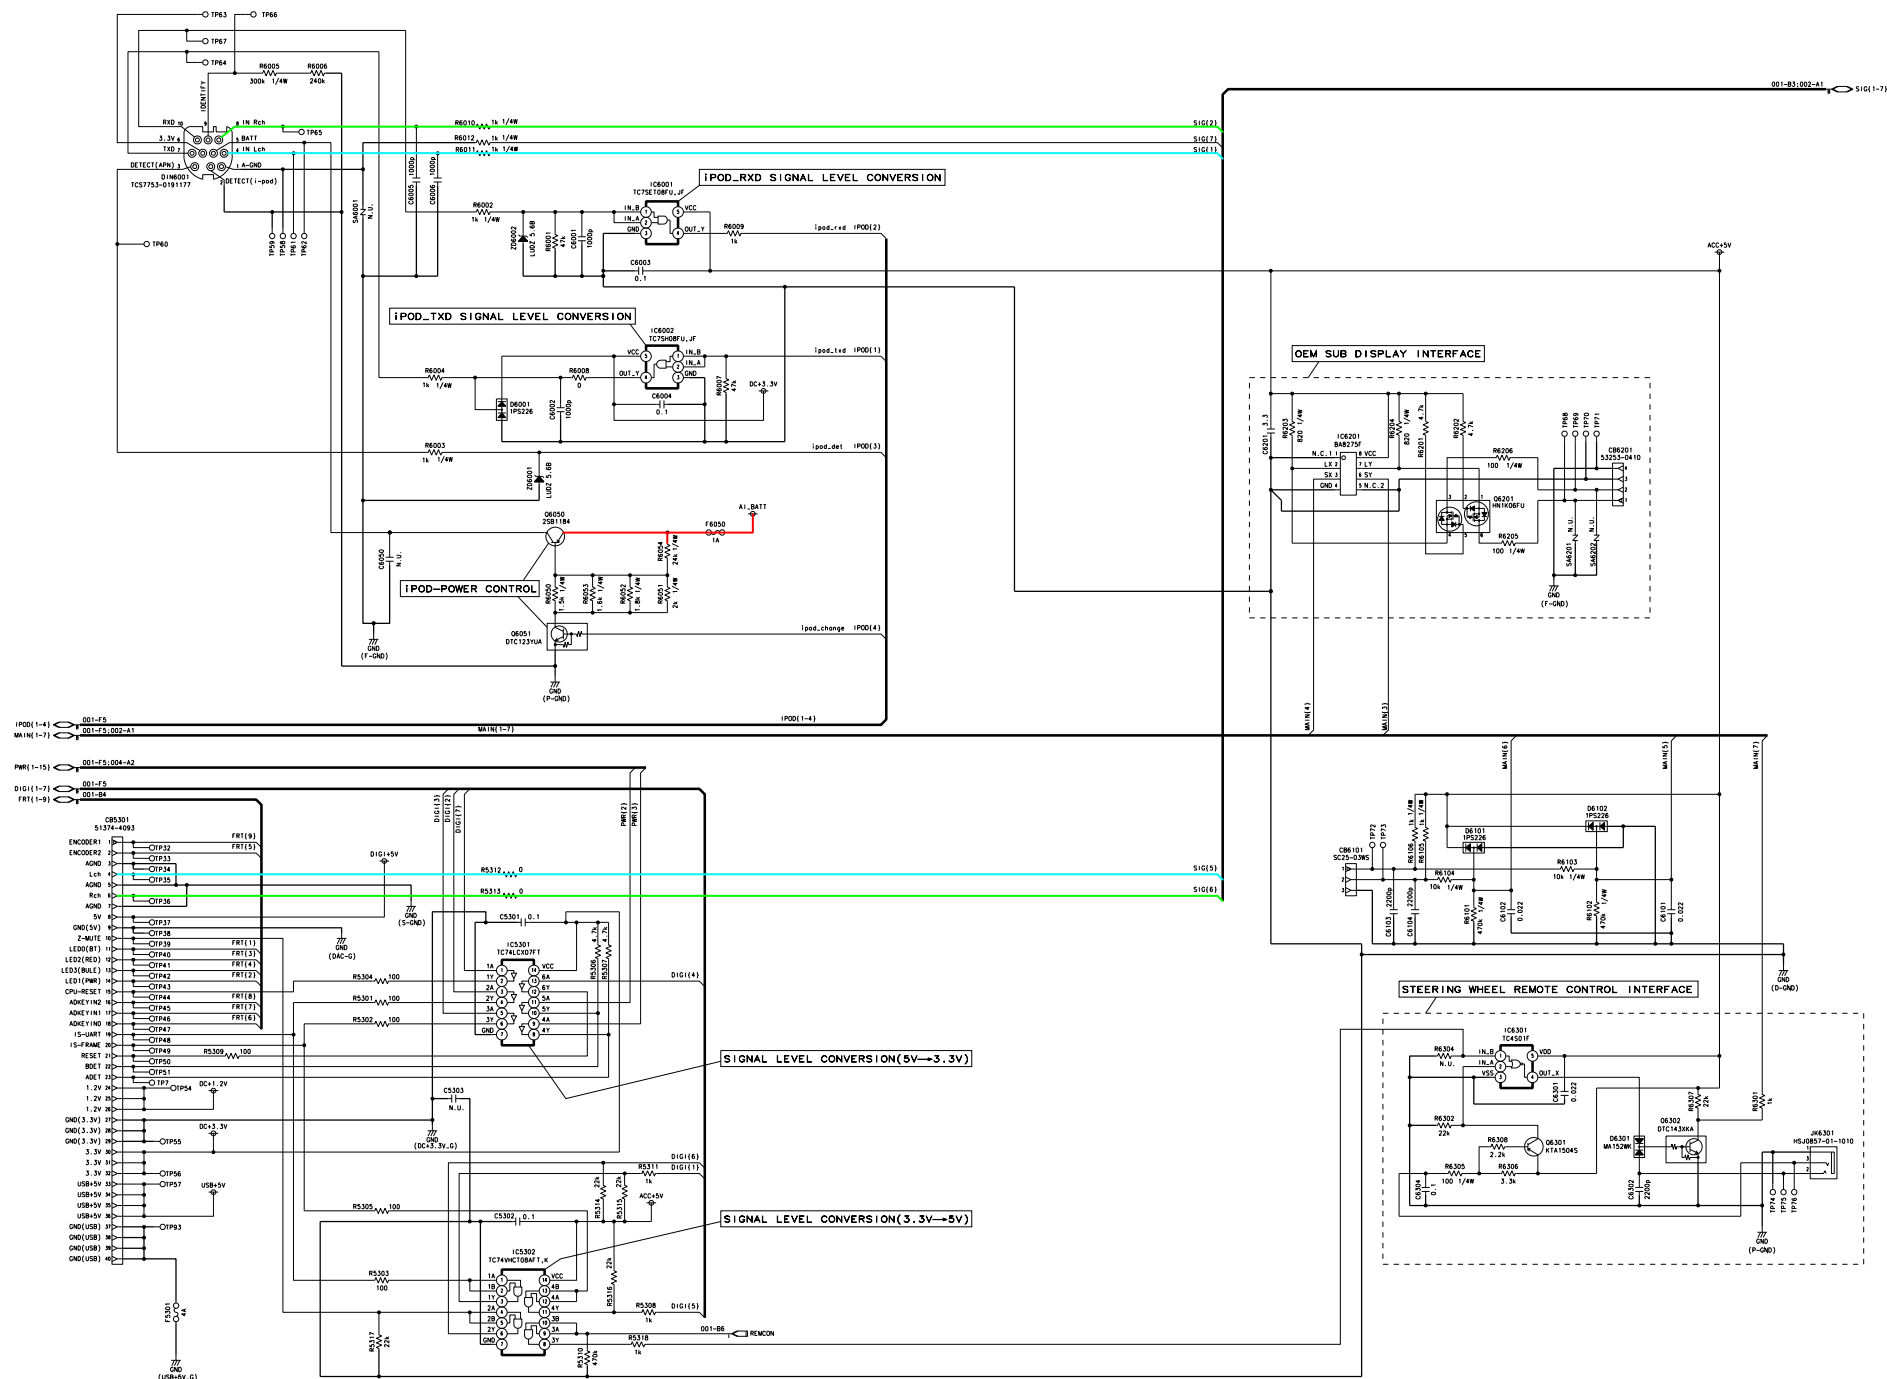


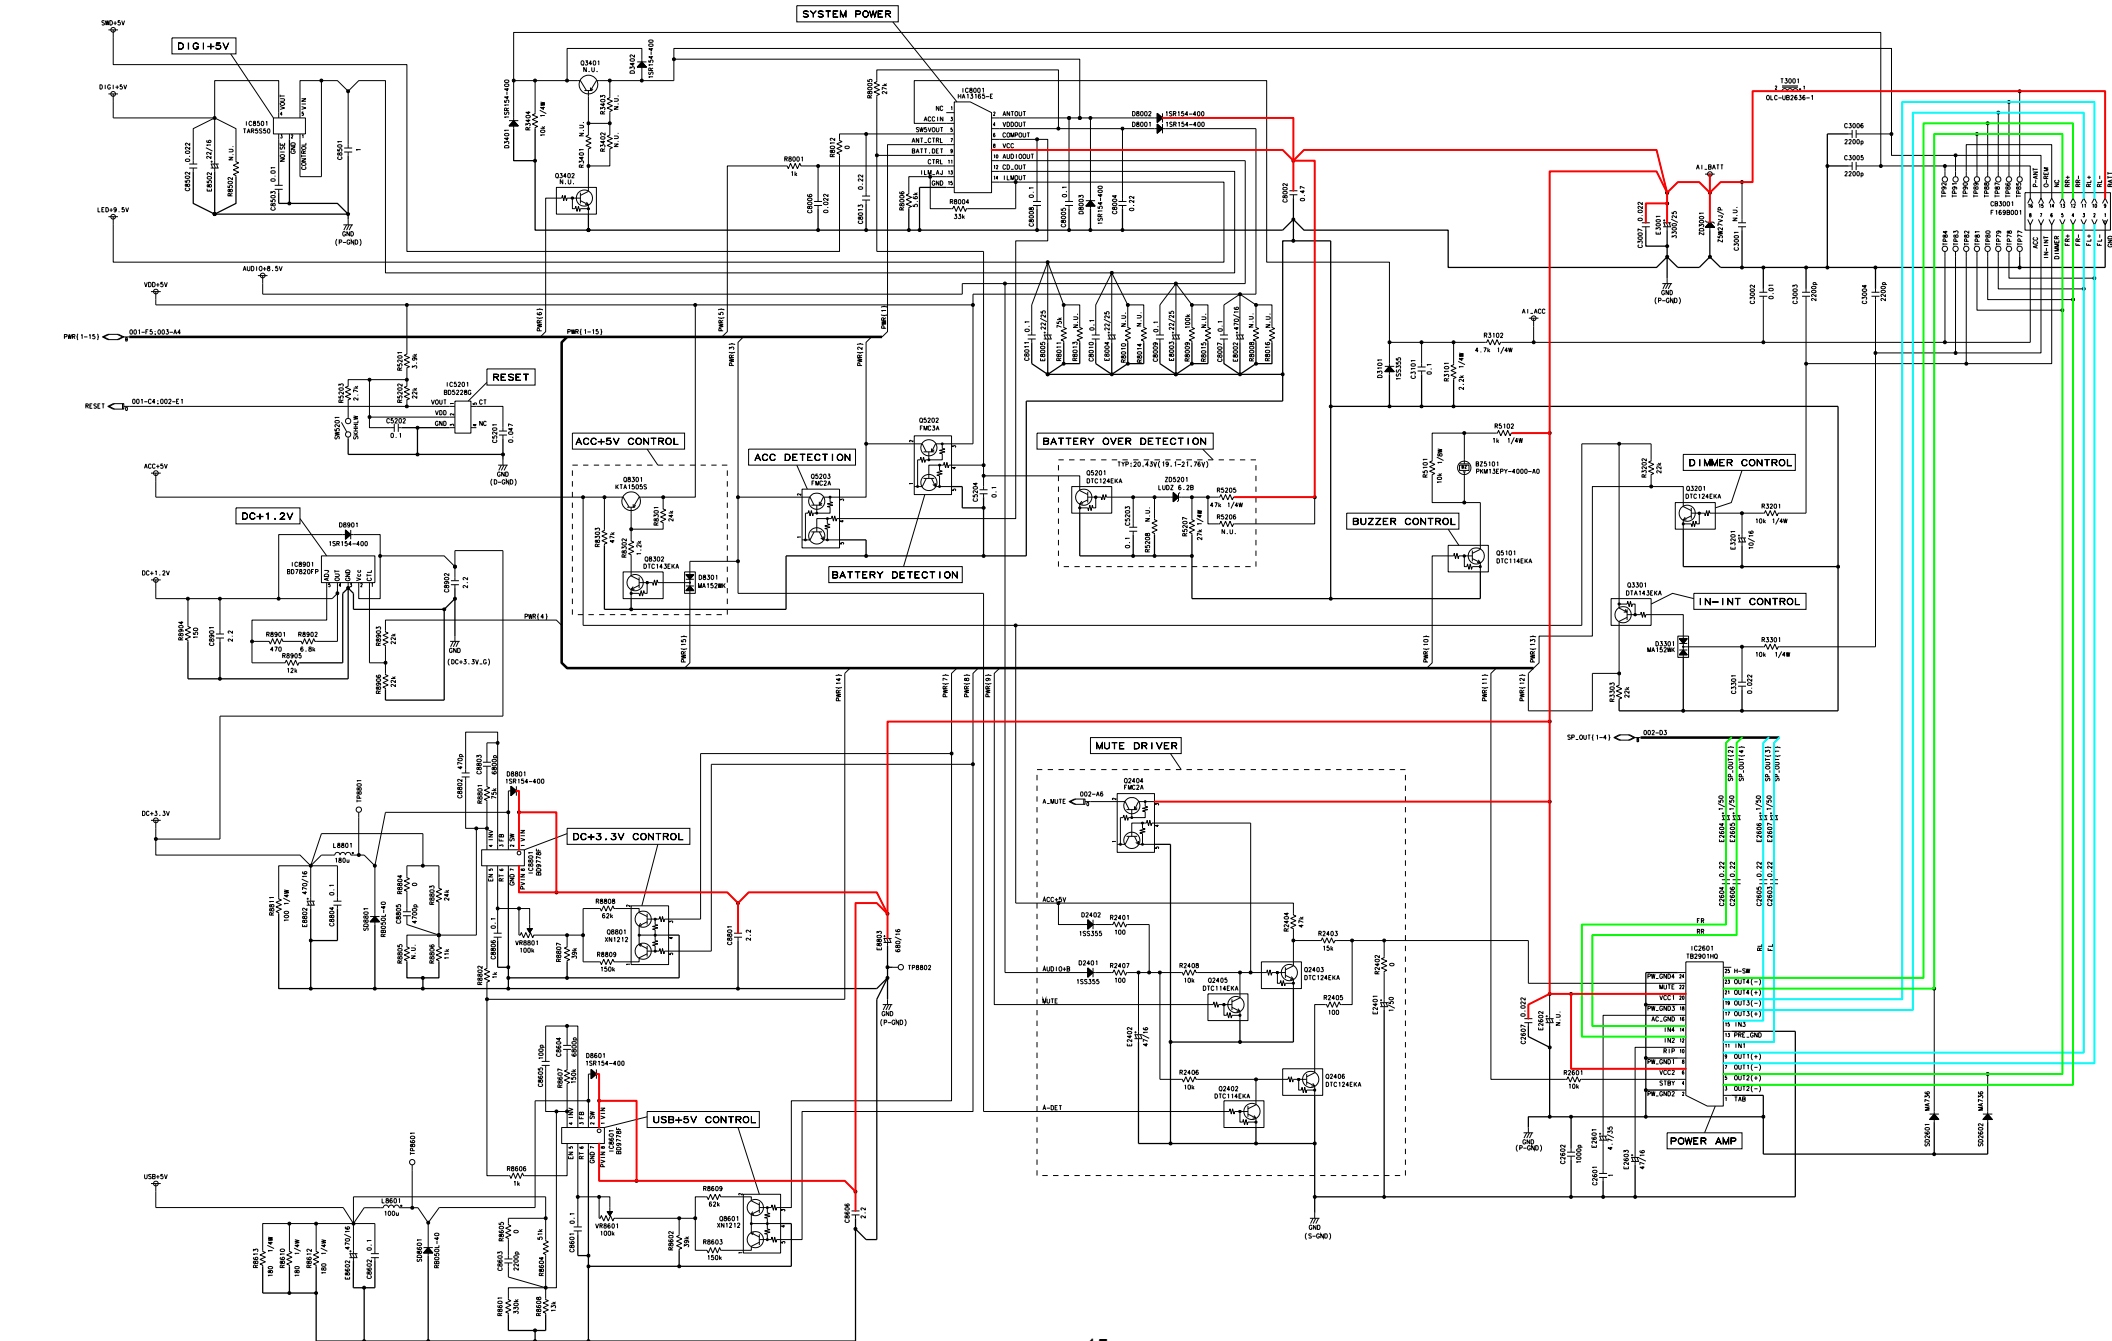







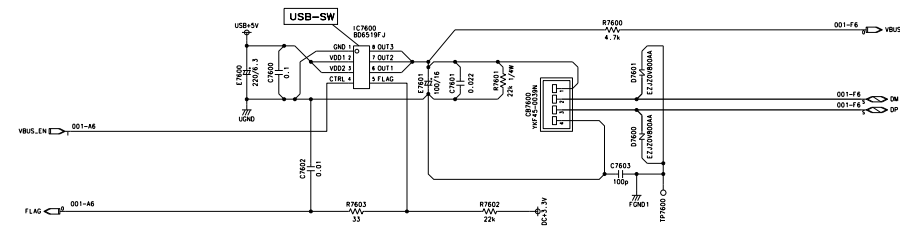


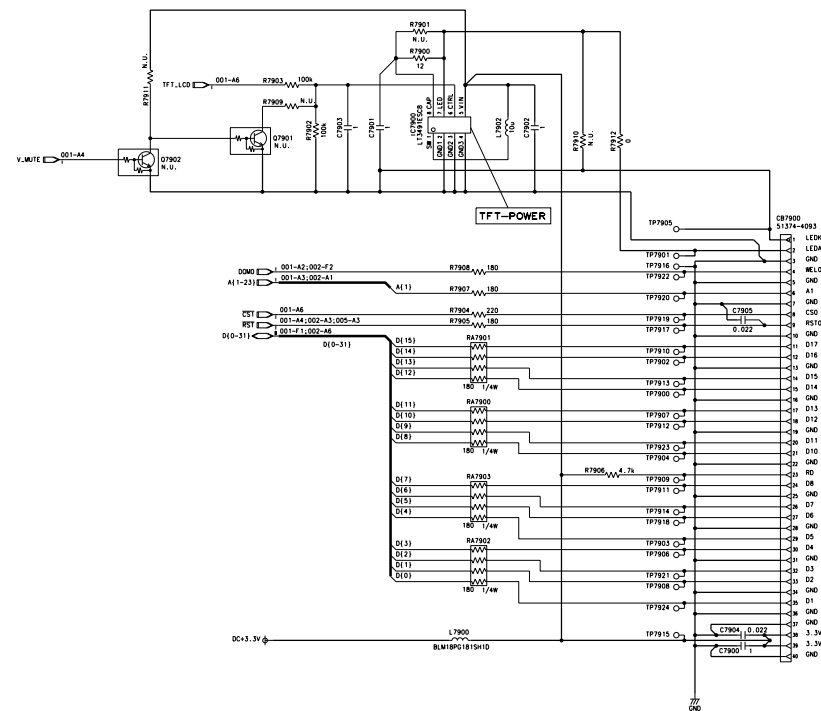

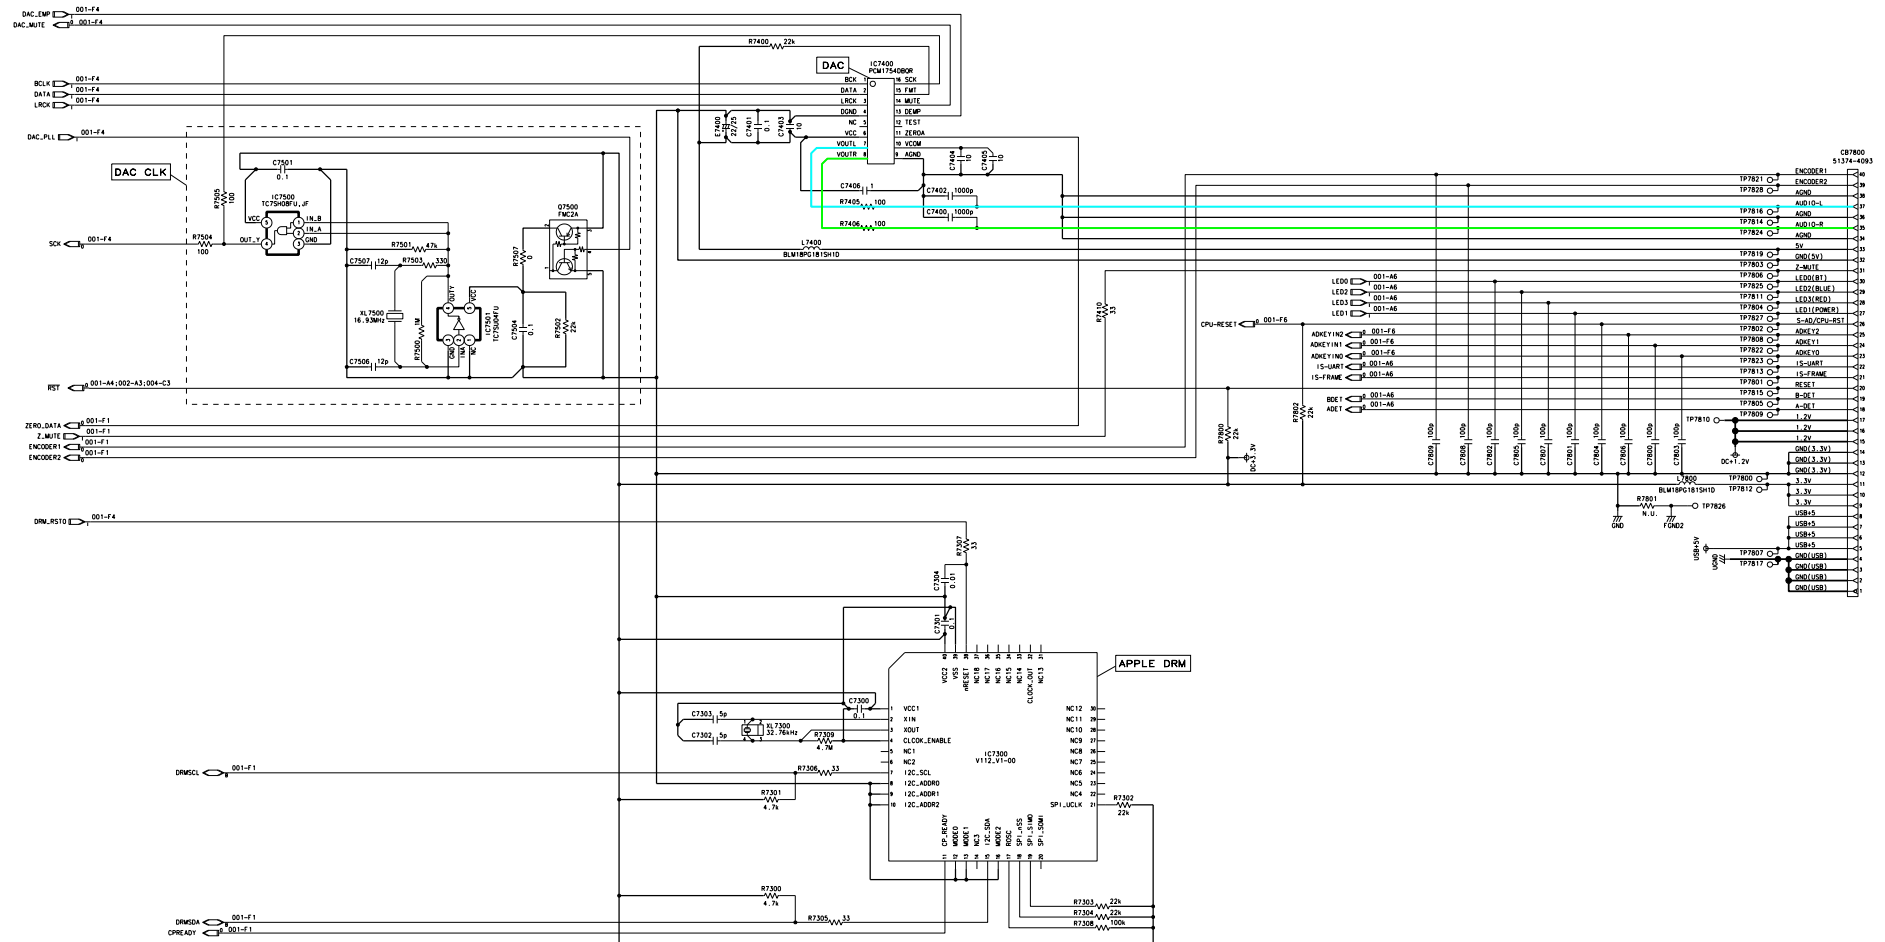



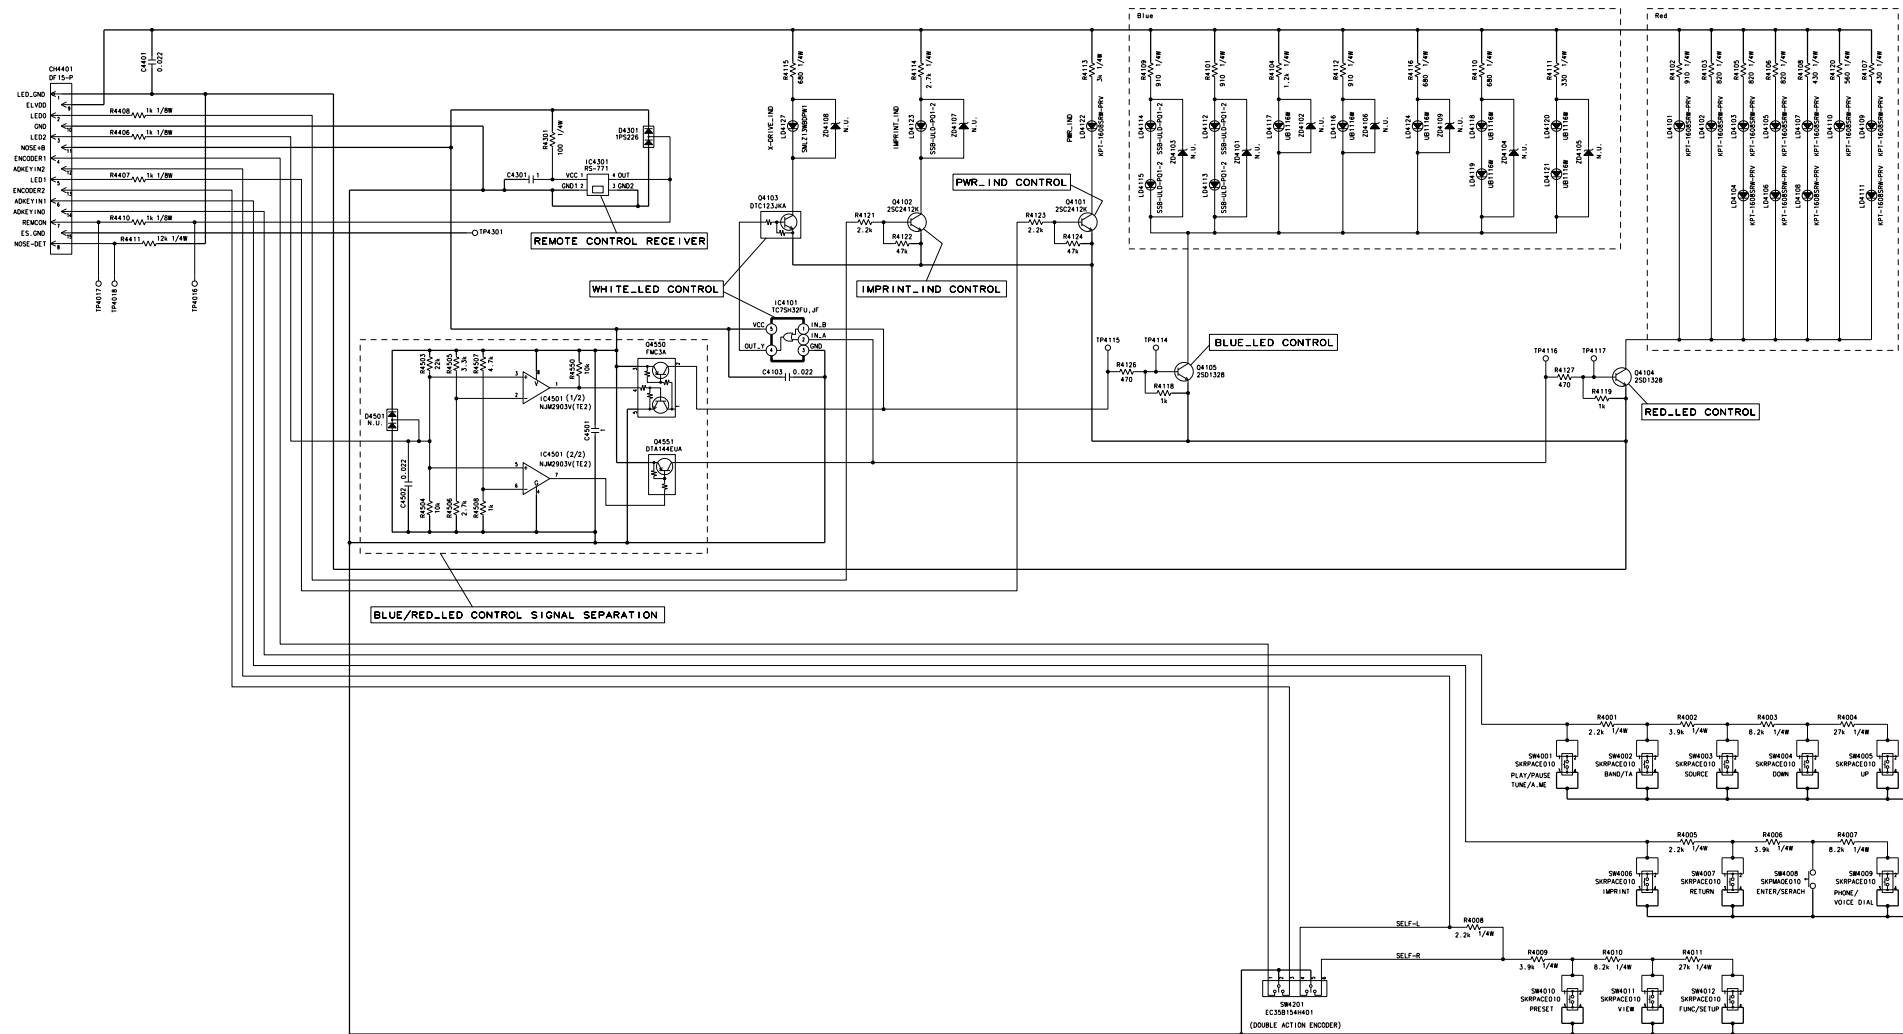


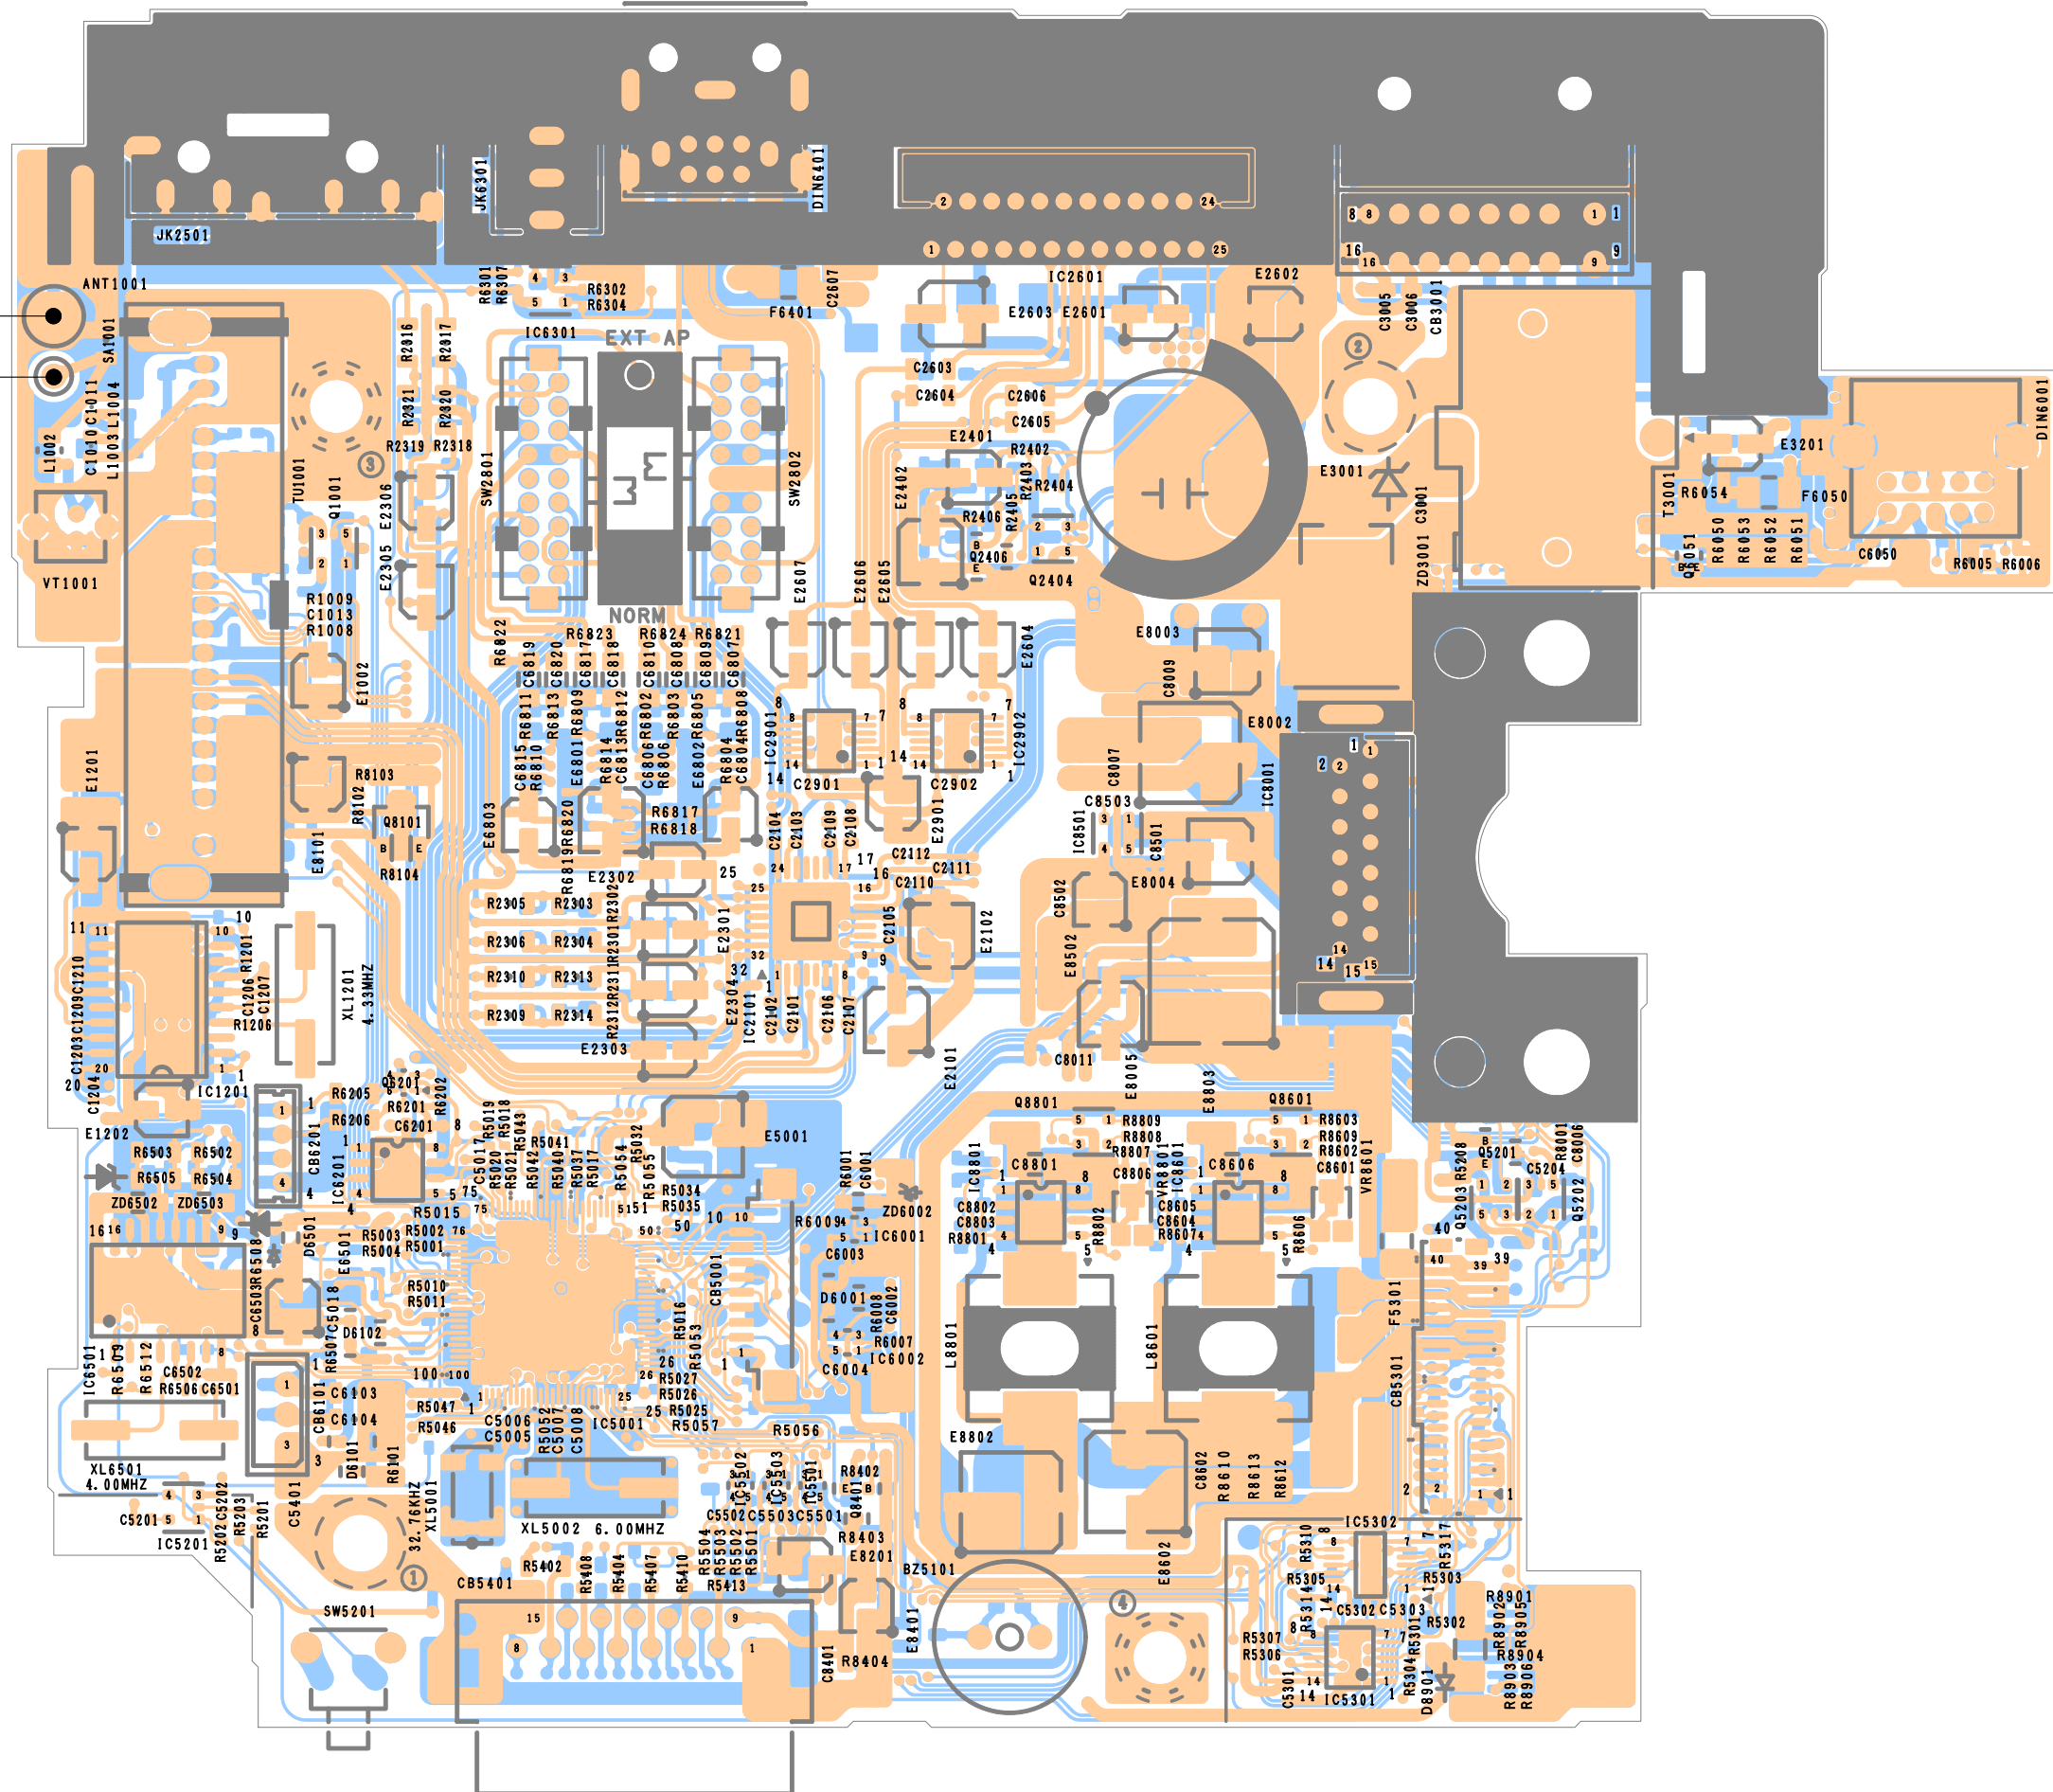

PL 01 DU F 161 DU

This is a detailed schematic diagram of a printed circuit board (PCB) layout. The board is populated with numerous electronic components, including resistors (R), capacitors (C), diodes (D), transistors (Q), and integrated circuits (IC). The components are interconnected by a complex network of blue and orange traces. Key features include a central area labeled "EXT-AP" and "NORM", a bottom right section labeled "84-10571Z01" and "PANEL-MAIN", and various component footprints and labels throughout the layout.


# DIGI-P.W.Board

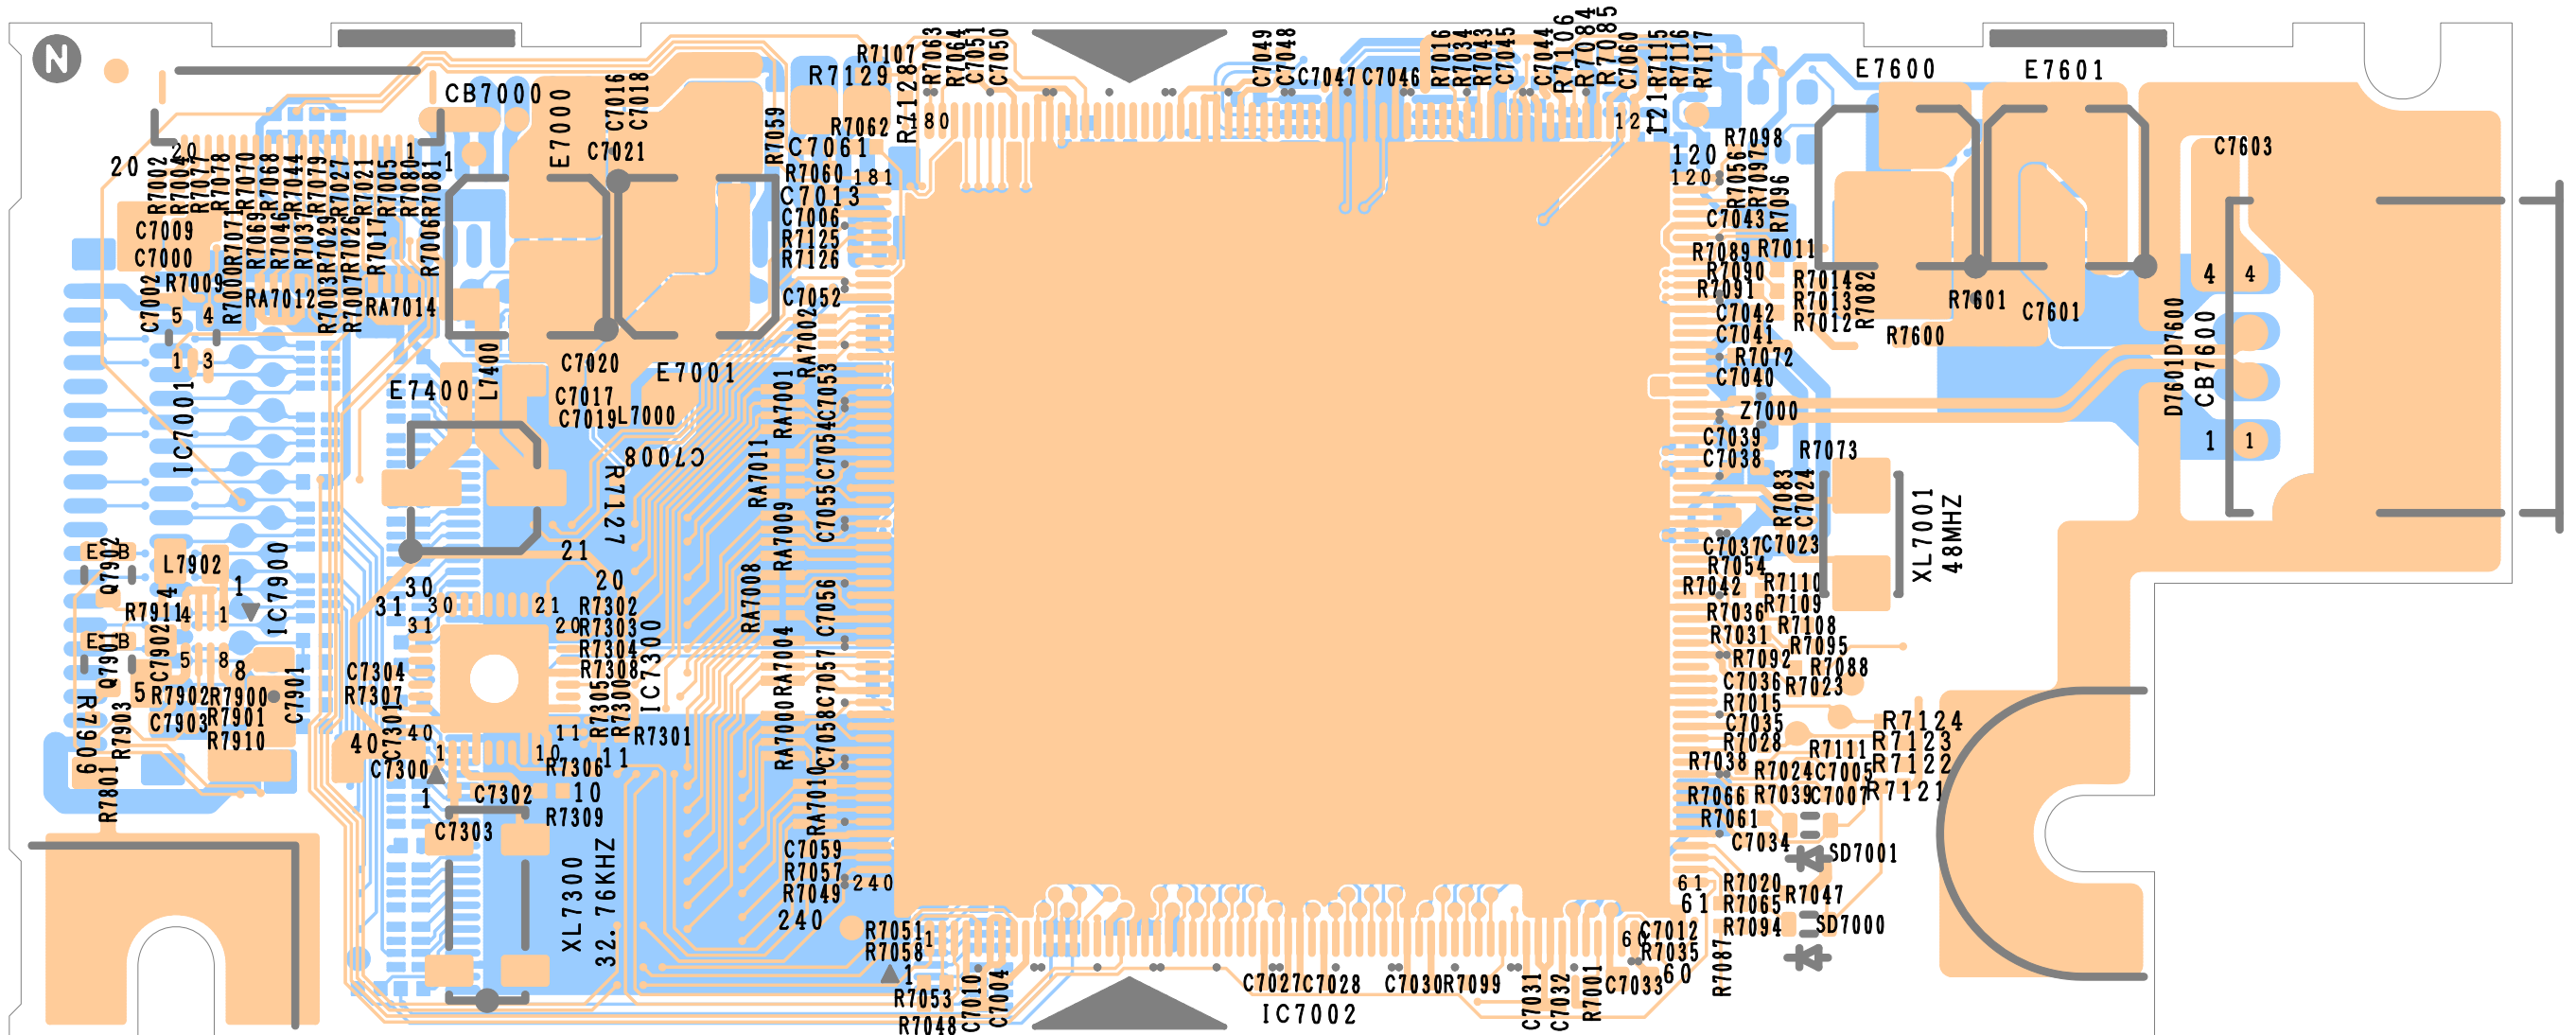

Orange Color Pattern:Component Side Pattern  
Blue Color Pattern:Foil Side Pattern




# DIGI-P.W.Board

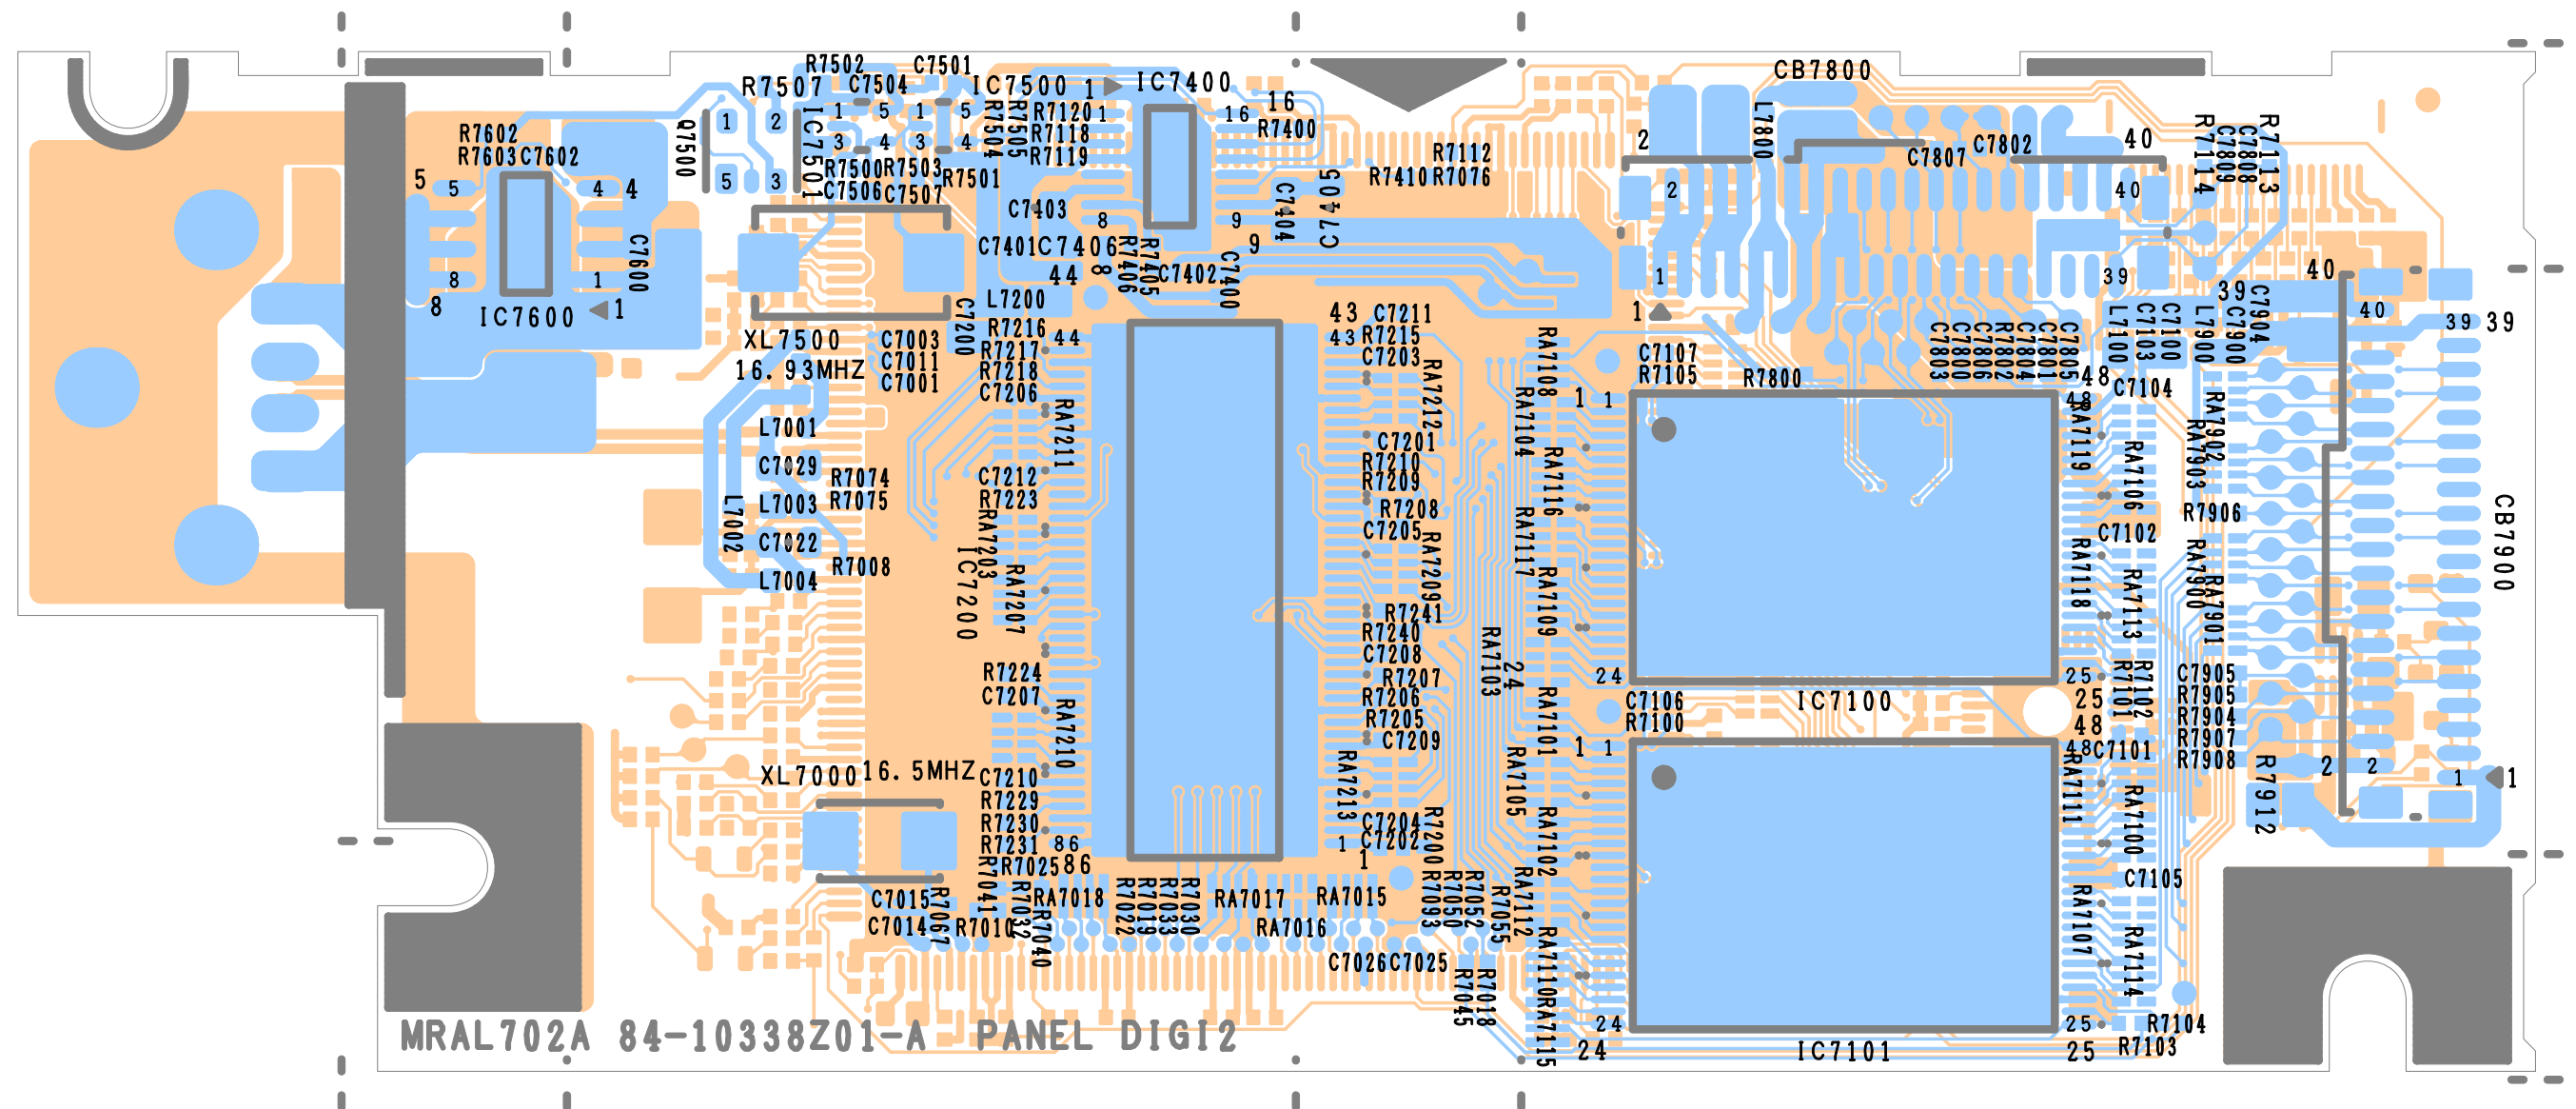


Orange Color Pattern:Component Side Pattern  
Blue Color Pattern:Foil Side Pattern

# FRONT-P.W.Board

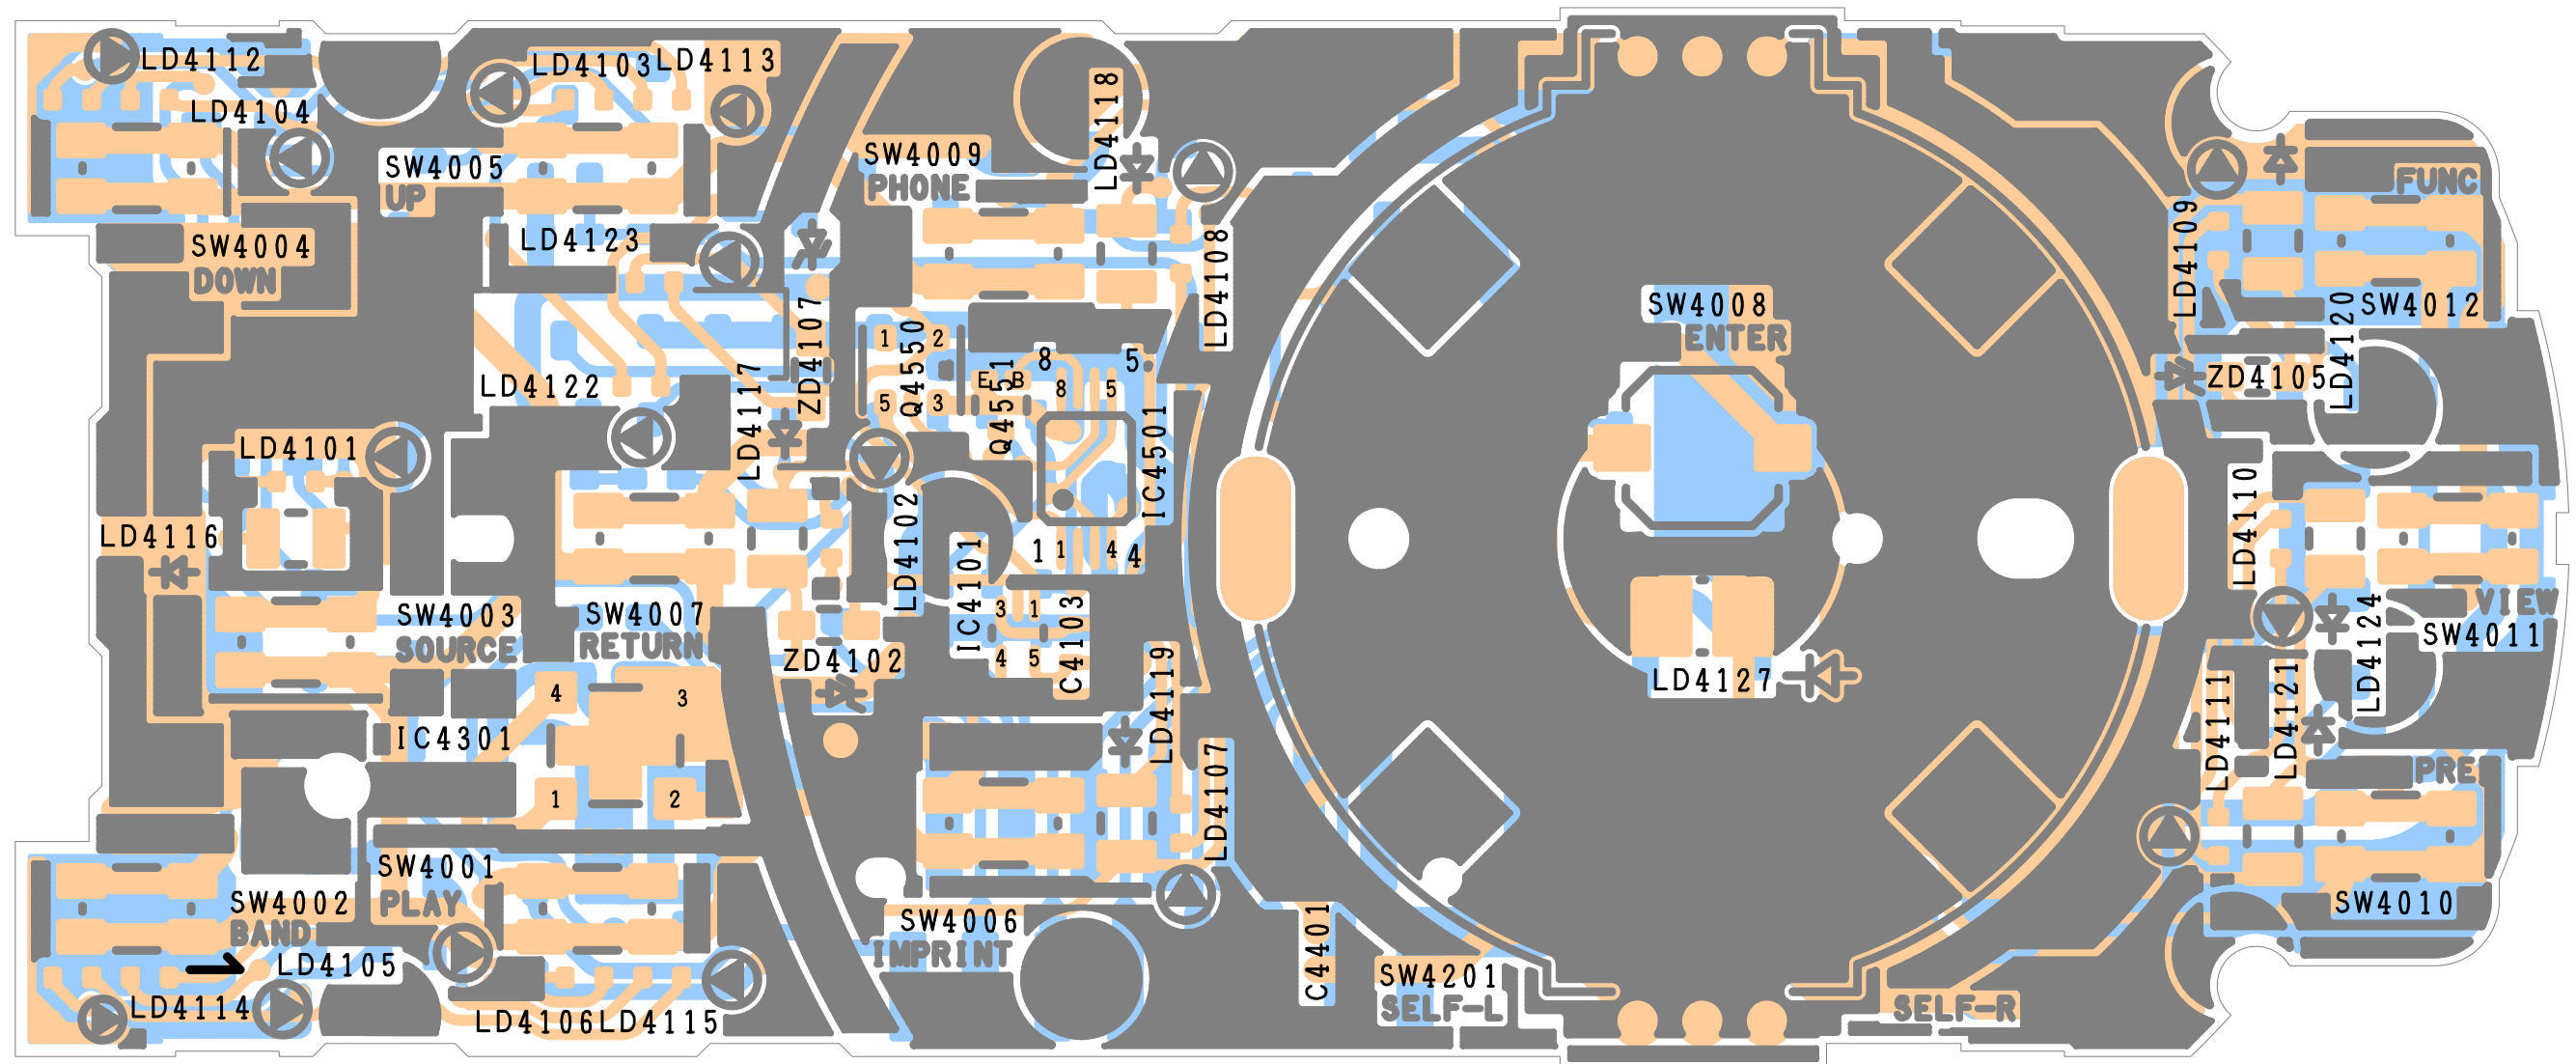


Orange Color Pattern:Component Side Pattern  
Blue Color Pattern:Foil Side Pattern

# FRONT-P.W.Board

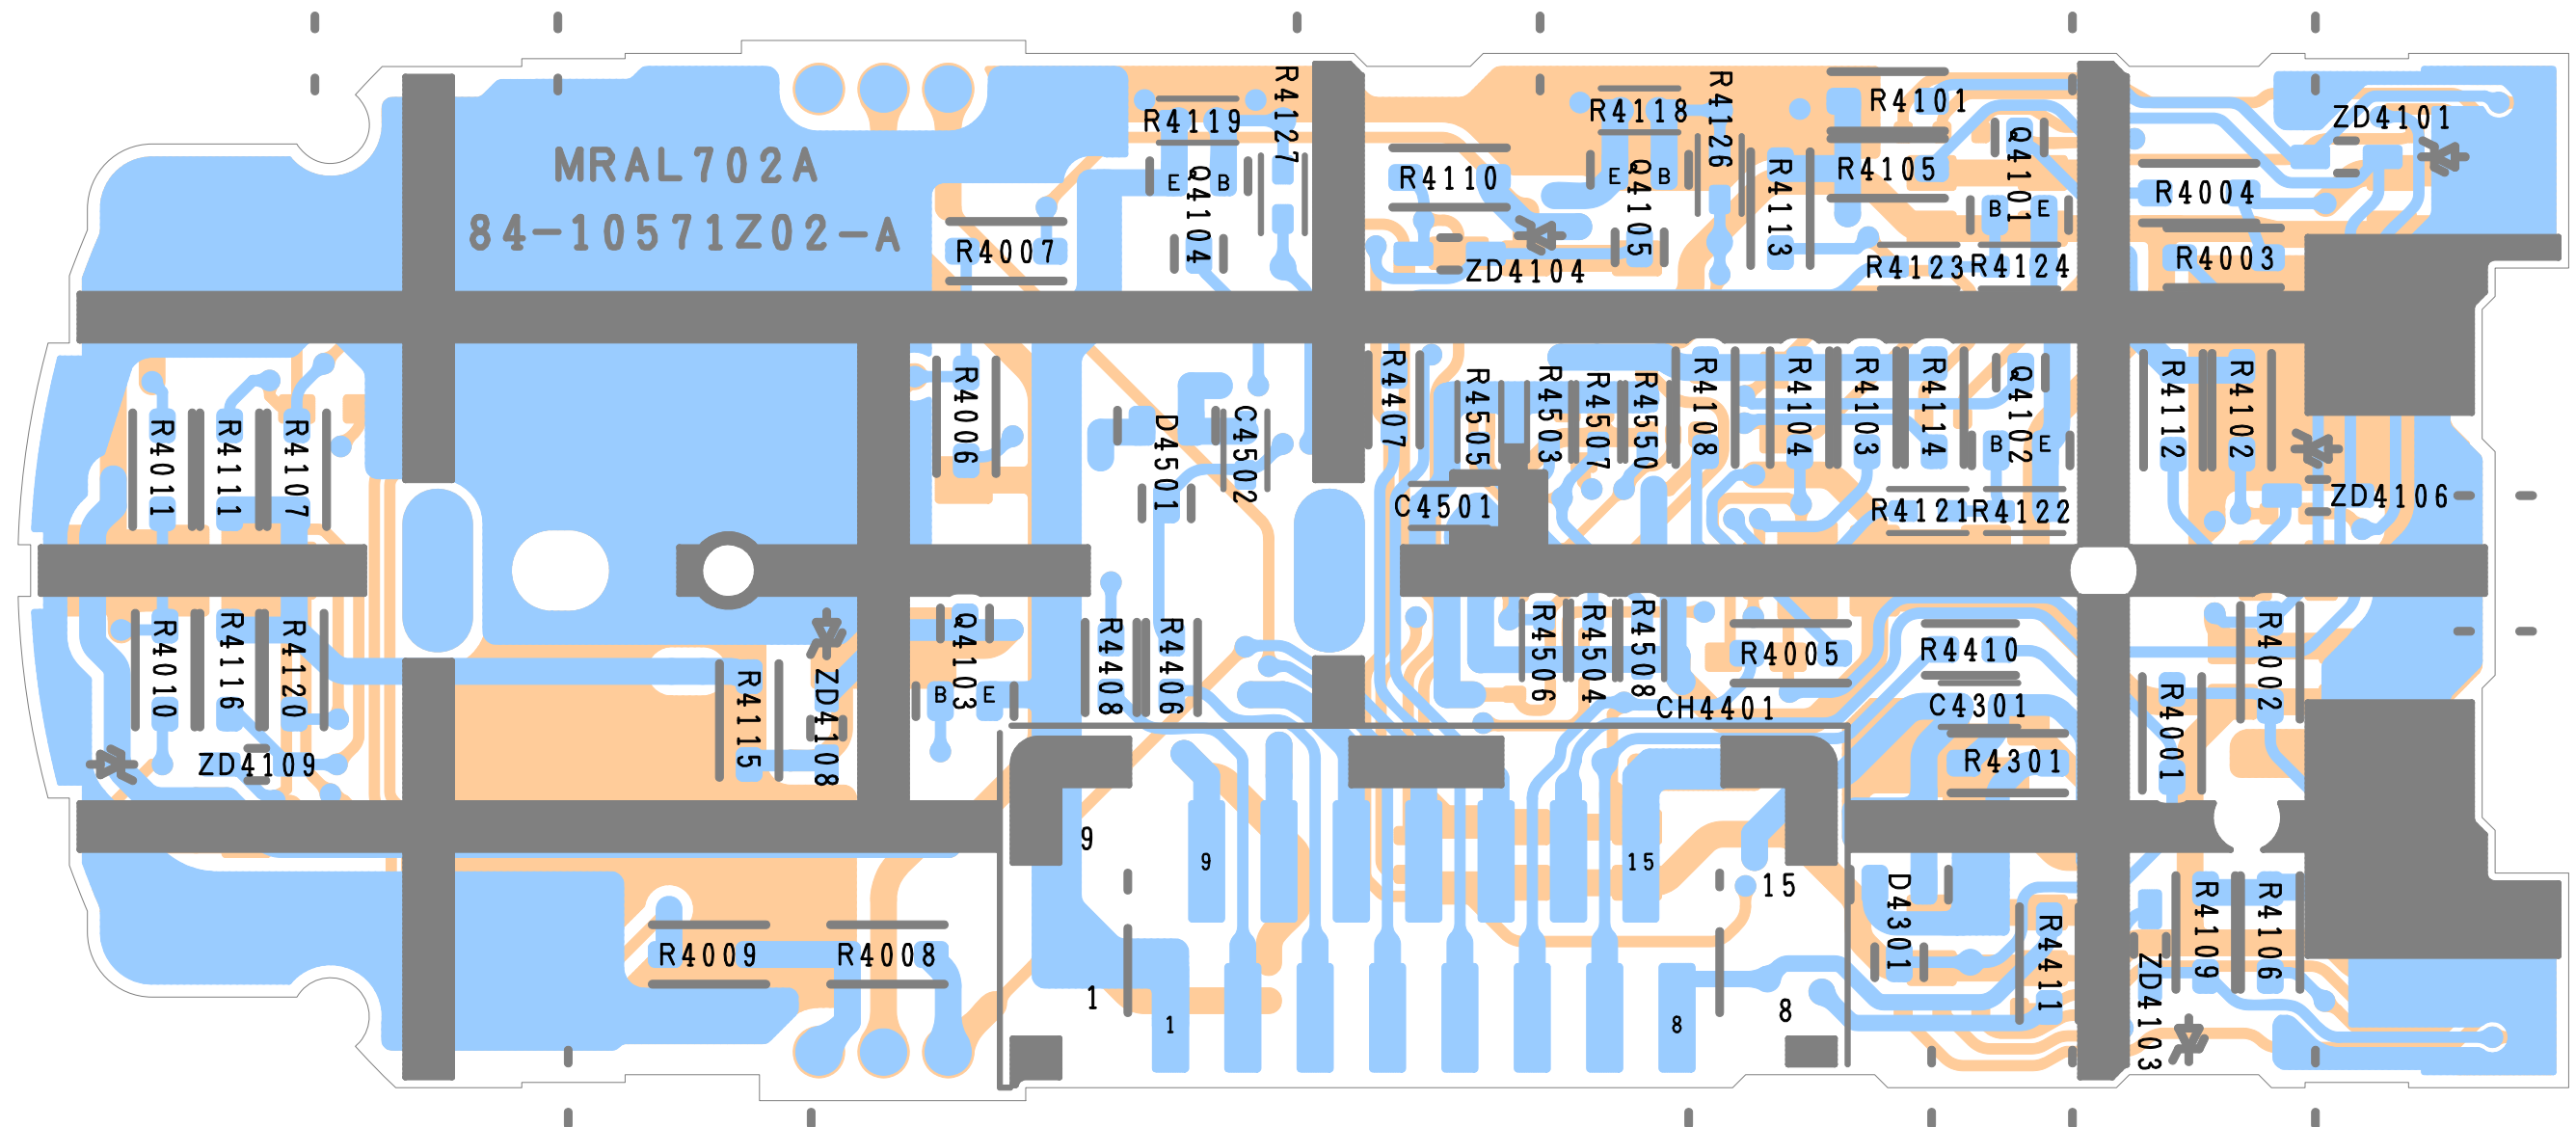

Orange Color Pattern:Component Side Pattern  
Blue Color Pattern:Foil Side Pattern

# Exploded View (Cabinet)

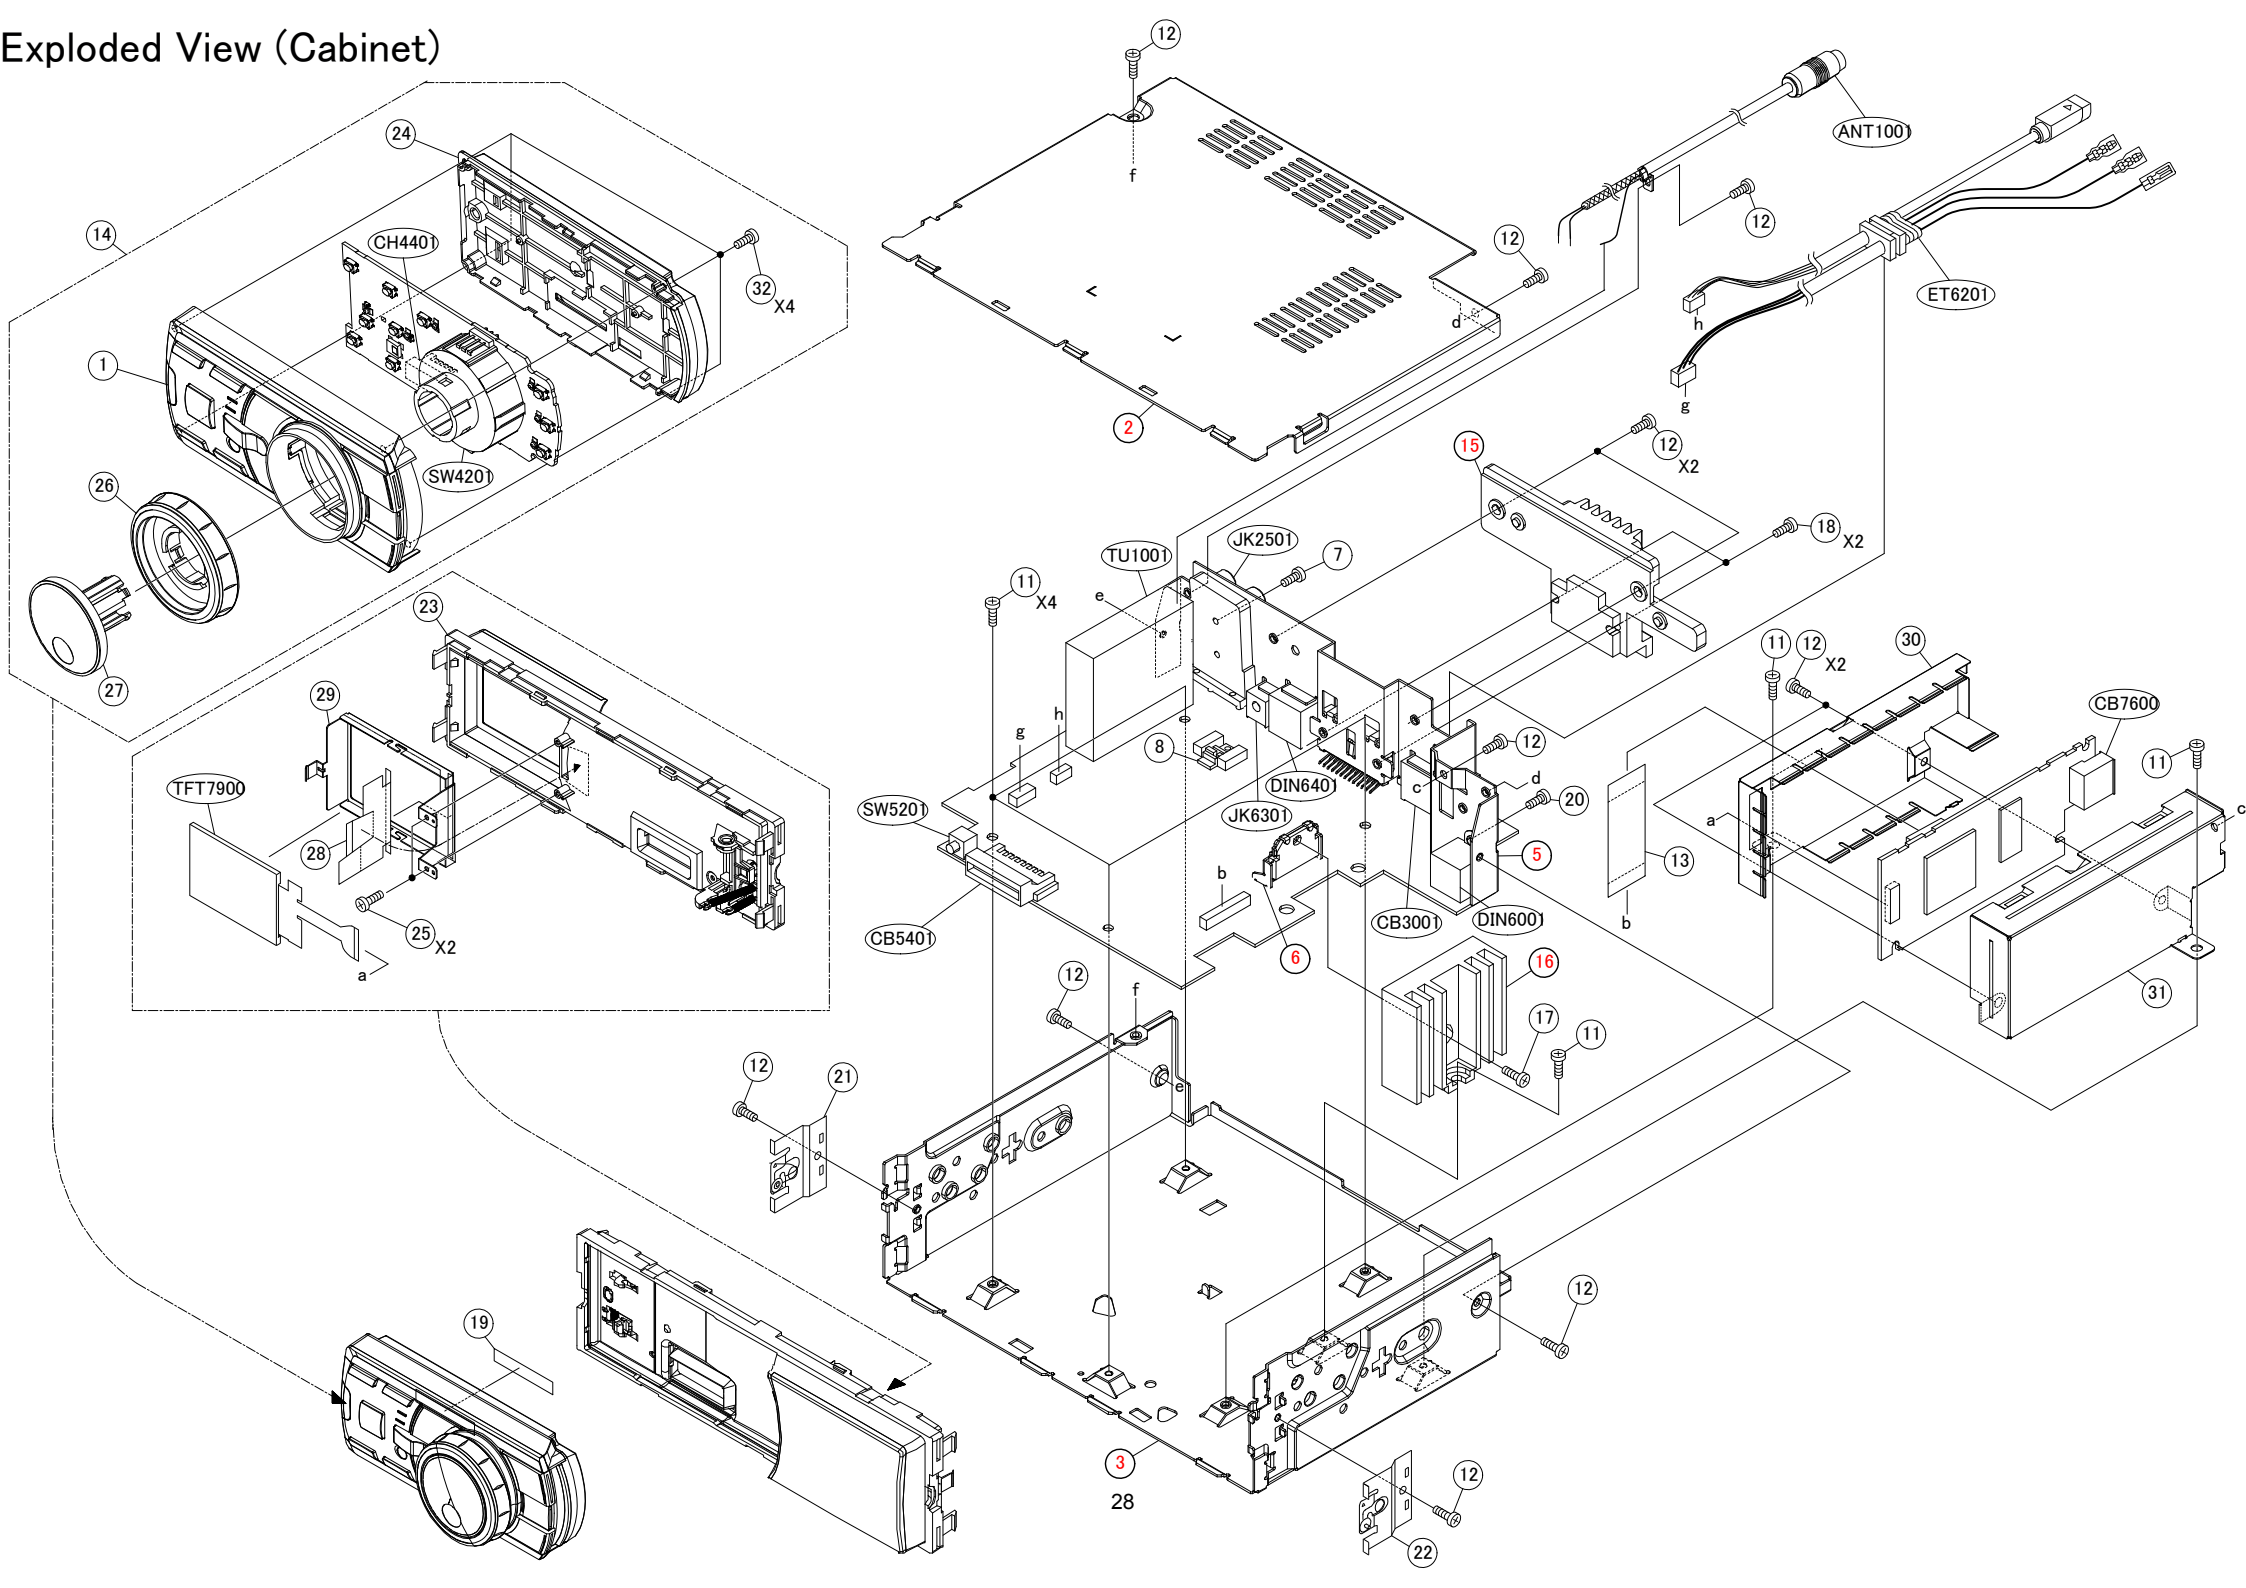




## Electrical Parts List



Model Code  
iDA-X100

NOTE: The part that has not PART NUMBER will not be supplied.



P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board			<a href="#">ANT1001</a>	09-09398Z01	ASSY,ANID-0058-01A
MAIN-P.W.Board			<a href="#">BZ5101</a>	50T15447Y02	BUZZER,PKM13EPY -R5
MAIN-P.W.Board			<a href="#">C1001</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C1003</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C1005</a>	08S45676W69	CAP,CER.472K-B1H -CP
MAIN-P.W.Board			<a href="#">C1006</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C1009</a>	08S82122F21	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C1010</a>	08S82122F17	CAP,CER.15RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C1011</a>	08S82122F17	CAP,CER.15RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C1201</a>	08S45676W73	CAP,CER.103K-B1H -CP
MAIN-P.W.Board			<a href="#">C1202</a>	08S45676W84	CAP,CER 683K-B1C -CP
MAIN-P.W.Board			<a href="#">C1203</a>	08S45677W54	CAP,CER 561J-CH1H-CP
MAIN-P.W.Board			<a href="#">C1204</a>	08S45676W65	CAP,CER.222K-B1H -CP
MAIN-P.W.Board			<a href="#">C1205</a>	08S45676W65	CAP,CER.222K-B1H -CP
MAIN-P.W.Board			<a href="#">C1206</a>	08S45677W22	CAP,CER.27RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C1207</a>	08S45677W22	CAP,CER.27RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C1208</a>	08S45677W48	CAP,CER.331J-CH1H-CP
MAIN-P.W.Board			<a href="#">C1209</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C1210</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C2101</a>	08S65674Y05	CAP,CER 105KX5R1C-CP
MAIN-P.W.Board			<a href="#">C2102</a>	08S65674Y05	CAP,CER 105KX5R1C-CP
MAIN-P.W.Board			<a href="#">C2103</a>	08S65674Y05	CAP,CER 105KX5R1C-CP
MAIN-P.W.Board			<a href="#">C2104</a>	08S65674Y05	CAP,CER 105KX5R1C-CP
MAIN-P.W.Board			<a href="#">C2105</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C2106</a>	08S65674Y03	CAP,CER 225KX5R1A-CP
MAIN-P.W.Board			<a href="#">C2107</a>	08S35350Y04	CAP,CER 105K-B1C -CP
MAIN-P.W.Board			<a href="#">C2108</a>	08S35350Y04	CAP,CER 105K-B1C -CP
MAIN-P.W.Board			<a href="#">C2109</a>	08S65674Y03	CAP,CER 225KX5R1A-CP
MAIN-P.W.Board			<a href="#">C2110</a>	08S65674Y03	CAP,CER 225KX5R1A-CP
MAIN-P.W.Board			<a href="#">C2111</a>	08S65674Y03	CAP,CER 225KX5R1A-CP
MAIN-P.W.Board			<a href="#">C2112</a>	08S65674Y03	CAP,CER 225KX5R1A-CP
MAIN-P.W.Board			<a href="#">C2501</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C2502</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C2503</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C2504</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C2505</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C2506</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C2507</a>	08S45676W68	CAP,CER.392K-B1H -CP
MAIN-P.W.Board			<a href="#">C2601</a>	08T81833F07	CAP,CER 105K-B1C -CP
MAIN-P.W.Board			<a href="#">C2602</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C2603</a>	08S60102F40	CAP,CER 224K-B1E -CP
MAIN-P.W.Board			<a href="#">C2604</a>	08S60102F40	CAP,CER 224K-B1E -CP
MAIN-P.W.Board			<a href="#">C2605</a>	08S60102F40	CAP,CER 224K-B1E -CP
MAIN-P.W.Board			<a href="#">C2606</a>	08S60102F40	CAP,CER 224K-B1E -CP
MAIN-P.W.Board			<a href="#">C2607</a>	08S35349Y11	CAP,CER 223K-B1H -CP
MAIN-P.W.Board			<a href="#">C2901</a>	08S45676W80	CAP,CER 223K-B1E -CP

MAIN-P.W.Board			<a href="#">C2902</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C3002</a>	08S45539Y04	CAP,CER 103KX7R2J-CP
MAIN-P.W.Board			<a href="#">C3003</a>	08S45539Y02	CAP,CER 222KX7R2J-CP
MAIN-P.W.Board			<a href="#">C3004</a>	08S45539Y02	CAP,CER 222KX7R2J-CP
MAIN-P.W.Board			<a href="#">C3005</a>	08S45539Y02	CAP,CER 222KX7R2J-CP
MAIN-P.W.Board			<a href="#">C3006</a>	08S45539Y02	CAP,CER 222KX7R2J-CP
MAIN-P.W.Board			<a href="#">C3007</a>	08S65128F78	CAP,CER.223K-B1H -CP
MAIN-P.W.Board			<a href="#">C3101</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C3301</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C5001</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C5002</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C5003</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C5004</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C5005</a>	08S45677W18	CAP,CER.18RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C5006</a>	08S45677W20	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C5007</a>	08S45677W22	CAP,CER.27RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C5008</a>	08S45677W22	CAP,CER.27RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C5009</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C5010</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C5011</a>	08S35349Y16	CAP,CER 105K-B1A -CP
MAIN-P.W.Board			<a href="#">C5012</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C5013</a>	08S45677W54	CAP,CER 561J-CH1H-CP
MAIN-P.W.Board			<a href="#">C5014</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C5015</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C5016</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C5017</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C5201</a>	08S45676W89	CAP,CER 473K-B1E -CP
MAIN-P.W.Board			<a href="#">C5202</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C5203</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C5204</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C5301</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C5302</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C5401</a>	08S45676W73	CAP,CER.103K-B1H -CP
MAIN-P.W.Board			<a href="#">C5501</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C5502</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C5503</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C6001</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C6002</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C6003</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C6004</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C6005</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C6006</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C6101</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C6102</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C6103</a>	08S45539Y02	CAP,CER 222KX7R2J-CP
MAIN-P.W.Board			<a href="#">C6104</a>	08S45539Y02	CAP,CER 222KX7R2J-CP
MAIN-P.W.Board			<a href="#">C6201</a>	08T65463Y01	CAP,CER 335K-B1A -CP
MAIN-P.W.Board			<a href="#">C6301</a>	08S65128F78	CAP,CER.223K-B1H -CP
MAIN-P.W.Board			<a href="#">C6302</a>	08S45676W65	CAP,CER.222K-B1H -CP
MAIN-P.W.Board			<a href="#">C6304</a>	08T15807W05	CAP,104-B-K-1H -CP
MAIN-P.W.Board			<a href="#">C6401</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C6402</a>	08S35349Y08	CAP,CER 102K-B1H -CP
MAIN-P.W.Board			<a href="#">C6501</a>	08S45677W22	CAP,CER.27RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6502</a>	08S45677W22	CAP,CER.27RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6503</a>	08S45676W80	CAP,CER 223K-B1E -CP

MAIN-P.W.Board			<a href="#">C6801</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C6802</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C6803</a>	08S45677W20	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6804</a>	08S45677W20	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6805</a>	08S45677W20	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6806</a>	08S45677W20	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6807</a>	08S65670Y03	CAP,CER 335KX5R1E-CP
MAIN-P.W.Board			<a href="#">C6808</a>	08S65670Y03	CAP,CER 335KX5R1E-CP
MAIN-P.W.Board			<a href="#">C6809</a>	08S65670Y03	CAP,CER 335KX5R1E-CP
MAIN-P.W.Board			<a href="#">C6810</a>	08S65670Y03	CAP,CER 335KX5R1E-CP
MAIN-P.W.Board			<a href="#">C6813</a>	08S45677W20	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6814</a>	08S45677W20	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6815</a>	08S45677W20	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6816</a>	08S45677W20	CAP,CER.22RJ-CH1H-CP
MAIN-P.W.Board			<a href="#">C6817</a>	08S65670Y03	CAP,CER 335KX5R1E-CP
MAIN-P.W.Board			<a href="#">C6818</a>	08S65670Y03	CAP,CER 335KX5R1E-CP
MAIN-P.W.Board			<a href="#">C6819</a>	08S65670Y03	CAP,CER 335KX5R1E-CP
MAIN-P.W.Board			<a href="#">C6820</a>	08S65670Y03	CAP,CER 335KX5R1E-CP
MAIN-P.W.Board			<a href="#">C8002</a>	08S60102F44	CAP,CER 474K-B1E -CP
MAIN-P.W.Board			<a href="#">C8004</a>	08S65667Y01	CAP,CER 224KX5R1C-CP
MAIN-P.W.Board			<a href="#">C8005</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8006</a>	08S35349Y11	CAP,CER 223K-B1H -CP
MAIN-P.W.Board			<a href="#">C8007</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8008</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8009</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8010</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8011</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8013</a>	08S65667Y01	CAP,CER 224KX5R1C-CP
MAIN-P.W.Board			<a href="#">C8201</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C8401</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C8501</a>	08S65667Y05	CAP,CER 105KX5R1A-CP
MAIN-P.W.Board			<a href="#">C8502</a>	08S45676W80	CAP,CER 223K-B1E -CP
MAIN-P.W.Board			<a href="#">C8503</a>	08S45676W73	CAP,CER.103K-B1H -CP
MAIN-P.W.Board			<a href="#">C8601</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8602</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8603</a>	08S45676W65	CAP,CER.222K-B1H -CP
MAIN-P.W.Board			<a href="#">C8604</a>	08S45676W71	CAP,CER.682K-B1H -CP
MAIN-P.W.Board			<a href="#">C8605</a>	08S45677W36	CAP,CER.101J-CH1H-CP
MAIN-P.W.Board			<a href="#">C8606</a>	08S65670Y08	CAP,CER 225KX5R1H-CP
MAIN-P.W.Board			<a href="#">C8801</a>	08S65670Y08	CAP,CER 225KX5R1H-CP
MAIN-P.W.Board			<a href="#">C8802</a>	08S45677W52	CAP,CER 471J-CH1H-CP
MAIN-P.W.Board			<a href="#">C8803</a>	08S45676W71	CAP,CER.682K-B1H -CP
MAIN-P.W.Board			<a href="#">C8804</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8805</a>	08S45676W69	CAP,CER.472K-B1H -CP
MAIN-P.W.Board			<a href="#">C8806</a>	08S45676W85	CAP,CER 104K-B1C -CP
MAIN-P.W.Board			<a href="#">C8901</a>	08S65674Y03	CAP,CER 225KX5R1A-CP
MAIN-P.W.Board			<a href="#">C8902</a>	08S65674Y03	CAP,CER 225KX5R1A-CP
MAIN-P.W.Board	✚		<a href="#">CB3001</a>	09T35473Y16	WTB,F169B001-16 -DB
MAIN-P.W.Board			<a href="#">CB5301</a>	09T75225Y40	FFC,51374-4093 -ER
MAIN-P.W.Board	✚		<a href="#">CB5401</a>	09-05560Z01	BTB,DF15-S -DB
MAIN-P.W.Board			<a href="#">CB6101</a>	09T55228W03	WTB,SC25-03WS -DB
MAIN-P.W.Board			<a href="#">CB6201</a>	09T03498K04	WTB,53253-0410 -DB
MAIN-P.W.Board			<a href="#">D1001</a>	48T85357W01	DIO,1PS226 -CP
MAIN-P.W.Board			<a href="#">D2301</a>	48T63463F01	DIO,DAP202K-96 -CP
MAIN-P.W.Board			<a href="#">D2302</a>	48T63463F01	DIO,DAP202K-96 -CP

MAIN-P.W.Board			<a href="#">D2303</a>	48T63463F01	DIO,DAP202K-96 -CP
MAIN-P.W.Board			<a href="#">D2401</a>	48T25665Y01	DIO,1SS355-TE17 -CP
MAIN-P.W.Board			<a href="#">D2402</a>	48T25665Y01	DIO,1SS355-TE17 -CP
MAIN-P.W.Board			<a href="#">D3101</a>	48T25665Y01	DIO,1SS355-TE17 -CP
MAIN-P.W.Board			<a href="#">D3301</a>	48T25651W02	DIO,MA152WK-TX -CP
MAIN-P.W.Board			<a href="#">D3401</a>	48T75527Y01	DIO,1SR154-400 -E1
MAIN-P.W.Board			<a href="#">D3402</a>	48T75527Y01	DIO,1SR154-400 -E1
MAIN-P.W.Board			<a href="#">D6001</a>	48T85357W01	DIO,1PS226 -CP
MAIN-P.W.Board			<a href="#">D6101</a>	48T85357W01	DIO,1PS226 -CP
MAIN-P.W.Board			<a href="#">D6102</a>	48T85357W01	DIO,1PS226 -CP
MAIN-P.W.Board			<a href="#">D6301</a>	48T25651W02	DIO,MA152WK-TX -CP
MAIN-P.W.Board			<a href="#">D6401</a>	48T75527Y01	DIO,1SR154-400 -E1
MAIN-P.W.Board			<a href="#">D6501</a>	48T25665Y01	DIO,1SS355-TE17 -CP
MAIN-P.W.Board			<a href="#">D8001</a>	48T75527Y01	DIO,1SR154-400 -E1
MAIN-P.W.Board			<a href="#">D8002</a>	48T75527Y01	DIO,1SR154-400 -E1
MAIN-P.W.Board			<a href="#">D8003</a>	48T75527Y01	DIO,1SR154-400 -E1
MAIN-P.W.Board			<a href="#">D8301</a>	48T25651W02	DIO,MA152WK-TX -CP
MAIN-P.W.Board			<a href="#">D8601</a>	48T75527Y01	DIO,1SR154-400 -E1
MAIN-P.W.Board			<a href="#">D8801</a>	48T75527Y01	DIO,1SR154-400 -E1
MAIN-P.W.Board			<a href="#">D8901</a>	48T75527Y01	DIO,1SR154-400 -E1
MAIN-P.W.Board			<a href="#">DIN6001</a>	09-05377Z01	DIN,TC7753-019117-DB
MAIN-P.W.Board			<a href="#">DIN6401</a>	09T55071W11	CON,TCP9389-11 -DT
MAIN-P.W.Board			<a href="#">E1002</a>	23T75543Y06	CAP,MVA 22R-1CD55-E2
MAIN-P.W.Board			<a href="#">E1201</a>	23S75244Y32	CAP,ELY 4R7-1V -E2
MAIN-P.W.Board			<a href="#">E1202</a>	23S75244Y16	CAP,ELY 10R-1C -E2
MAIN-P.W.Board			<a href="#">E2101</a>	23T75543Y13	CAP,MVA 22R-1EE55-E3
MAIN-P.W.Board			<a href="#">E2102</a>	23S75244Y25	CAP,ELY 22R-1E -E3
MAIN-P.W.Board			<a href="#">E2301</a>	23T75234Y15	CAP,MAR 3R3-1H-D55E2
MAIN-P.W.Board			<a href="#">E2302</a>	23T75234Y15	CAP,MAR 3R3-1H-D55E2
MAIN-P.W.Board			<a href="#">E2303</a>	23T75234Y15	CAP,MAR 3R3-1H-D55E2
MAIN-P.W.Board			<a href="#">E2304</a>	23T75234Y15	CAP,MAR 3R3-1H-D55E2
MAIN-P.W.Board			<a href="#">E2305</a>	23T75234Y15	CAP,MAR 3R3-1H-D55E2
MAIN-P.W.Board			<a href="#">E2306</a>	23T75234Y15	CAP,MAR 3R3-1H-D55E2
MAIN-P.W.Board			<a href="#">E2401</a>	23-02562Z22	CAP,HA 1R0-1H-B -E2
MAIN-P.W.Board			<a href="#">E2402</a>	23S75244Y18	CAP,ELY 47R-1C -E3
MAIN-P.W.Board			<a href="#">E2601</a>	23S75244Y32	CAP,ELY 4R7-1V -E2
MAIN-P.W.Board			<a href="#">E2603</a>	23S75244Y18	CAP,ELY 47R-1C -E3
MAIN-P.W.Board			<a href="#">E2604</a>	23-02562Z22	CAP,HA 1R0-1H-B -E2
MAIN-P.W.Board			<a href="#">E2605</a>	23-02562Z22	CAP,HA 1R0-1H-B -E2
MAIN-P.W.Board			<a href="#">E2606</a>	23-02562Z22	CAP,HA 1R0-1H-B -E2
MAIN-P.W.Board			<a href="#">E2607</a>	23-02562Z22	CAP,HA 1R0-1H-B -E2
MAIN-P.W.Board			<a href="#">E2901</a>	23T75543Y12	CAP,MVA 10R-1ED55-E2
MAIN-P.W.Board			<a href="#">E3001</a>	23T75325Y05	CAP,VB 332-1E +
MAIN-P.W.Board			<a href="#">E3201</a>	23S75244Y16	CAP,ELY 10R-1C -E2
MAIN-P.W.Board			<a href="#">E5001</a>	23T75543Y09	CAP,MVA 221-1CF80-E6
MAIN-P.W.Board			<a href="#">E6501</a>	23T75543Y06	CAP,MVA 22R-1CD55-E2
MAIN-P.W.Board			<a href="#">E6801</a>	23T75543Y13	CAP,MVA 22R-1EE55-E3
MAIN-P.W.Board			<a href="#">E6802</a>	23T75543Y12	CAP,MVA 10R-1ED55-E2
MAIN-P.W.Board			<a href="#">E6803</a>	23T75543Y12	CAP,MVA 10R-1ED55-E2
MAIN-P.W.Board			<a href="#">E8002</a>	23S75244Y22	CAP,ELY 471-1C -EA
MAIN-P.W.Board			<a href="#">E8003</a>	23S75244Y25	CAP,ELY 22R-1E -E3
MAIN-P.W.Board			<a href="#">E8004</a>	23S75244Y25	CAP,ELY 22R-1E -E3
MAIN-P.W.Board			<a href="#">E8005</a>	23S75244Y25	CAP,ELY 22R-1E -E3
MAIN-P.W.Board			<a href="#">E8101</a>	23T75543Y06	CAP,MVA 22R-1CD55-E2
MAIN-P.W.Board			<a href="#">E8201</a>	23T75543Y06	CAP,MVA 22R-1CD55-E2



MAIN-P.W.Board			<a href="#">E8401</a>	23T75543Y06	CAP,MVA 22R-1CD55-E2
MAIN-P.W.Board			<a href="#">E8502</a>	23S75244Y17	CAP,ELY 22R-1C -E2
MAIN-P.W.Board			<a href="#">E8602</a>	23S75244Y22	CAP,ELY 471-1C -EA
MAIN-P.W.Board			<a href="#">E8802</a>	23S75244Y22	CAP,ELY 471-1C -EA
MAIN-P.W.Board			<a href="#">E8803</a>	23S75244Y23	CAP,ELY 681-1C -EA
MAIN-P.W.Board			<a href="#">F5301</a>	65T75477Y13	FUSE,CCP2E 4.0A -CP
MAIN-P.W.Board			<a href="#">F6050</a>	65T75477Y05	FUSE,CCP2E 1.0A -CP
MAIN-P.W.Board			<a href="#">F6401</a>	65T75477Y13	FUSE,CCP2E 4.0A -CP
MAIN-P.W.Board			<a href="#">IC1201</a>	51T15132Y02	SAA6588T -SE9
MAIN-P.W.Board			<a href="#">IC2101</a>	51-07764Z01	TDA7417 -QE6
MAIN-P.W.Board			<a href="#">IC2601</a>	51T65184Y01	TB2901H -ZS
MAIN-P.W.Board			<a href="#">IC2901</a>	51T25612Y01	TC4066BFT-EL -SE5
MAIN-P.W.Board			<a href="#">IC2902</a>	51T25612Y01	TC4066BFT-EL -SE5
MAIN-P.W.Board			<a href="#">IC5001</a>	51-11600Z01	IC,M30626MJP-088 -QT
MAIN-P.W.Board			<a href="#">IC5002</a>	51T65770Y01	BR24L08F-W-E2 -SE2
MAIN-P.W.Board			<a href="#">IC5201</a>	51T75063Y06	BD5228G-TR -CP
MAIN-P.W.Board			<a href="#">IC5301</a>	51T45632Y01	TC74LCX07FT-EL -SE5
MAIN-P.W.Board			<a href="#">IC5302</a>	51T15194Y02	TC74VHCT08AFT,K -SE5
MAIN-P.W.Board			<a href="#">IC5501</a>	51T15185Y02	TC7SH08FU,JF-L -CP
MAIN-P.W.Board			<a href="#">IC5502</a>	51T15185Y02	TC7SH08FU,JF-L -CP
MAIN-P.W.Board			<a href="#">IC5503</a>	51T15185Y02	TC7SH08FU,JF-L -CP
MAIN-P.W.Board			<a href="#">IC6001</a>	51T25183Y03	TC7SET08FU,JF-L -CP
MAIN-P.W.Board			<a href="#">IC6002</a>	51T15185Y02	TC7SH08FU,JF-L -CP
MAIN-P.W.Board			<a href="#">IC6201</a>	51T65212Y01	BA8275F-E2 -SE2
MAIN-P.W.Board			<a href="#">IC6301</a>	51T93532F05	TC4S01F-TE85L -CP
MAIN-P.W.Board			<a href="#">IC6501</a>	51T55070W05	MB88385CPF-ER -SE9
MAIN-P.W.Board			<a href="#">IC6801</a>	51-05312Z01	BA4560RF-E2 -SE2
MAIN-P.W.Board			<a href="#">IC6802</a>	51-05312Z01	BA4560RF-E2 -SE2
MAIN-P.W.Board			<a href="#">IC8001</a>	51T65147Y01	HA13165 -ZS
MAIN-P.W.Board			<a href="#">IC8501</a>	51T55184Y01	TAR5S50 -CP
MAIN-P.W.Board			<a href="#">IC8601</a>	51T75303Y01	BD9778F-E2 -SE2
MAIN-P.W.Board			<a href="#">IC8801</a>	51T75303Y01	BD9778F-E2 -SE2
MAIN-P.W.Board			<a href="#">IC8901</a>	51-06219Z01	BD7820FP-E2 -NE5
MAIN-P.W.Board			<a href="#">JK2501</a>	09-11352Z01	RCA,YKC21-4816N -DB
MAIN-P.W.Board			<a href="#">JK6301</a>	09T95460W01	JAC,HSJ0857-01-1010+
MAIN-P.W.Board			<a href="#">L1001</a>	24T16403W29	COI,IND.15R-M -CP
MAIN-P.W.Board			<a href="#">L1002</a>	24T25164Y21	IND,FSLM2520 4R7J-CP
MAIN-P.W.Board			<a href="#">L1003</a>	24T55488Y59	IND,LLQ1608 R047J-CP
MAIN-P.W.Board			<a href="#">L1004</a>	24T55488Y24	IND,LLQ1608 R039J-CP
MAIN-P.W.Board			<a href="#">L8601</a>	24-04484Z06	IND,7B12HJ 101M -EA
MAIN-P.W.Board			<a href="#">L8801</a>	24-04484Z07	IND,7B12HJ 181M -EA
MAIN-P.W.Board			<a href="#">Q1001</a>	48T75205Y02	TR,FMC3A-T148 -CP
MAIN-P.W.Board			<a href="#">Q1201</a>	48T94606F06	TR,DTC114EUA-T106-CP
MAIN-P.W.Board			<a href="#">Q2301</a>	48T25317Y01	TR,XN0F256-TX -CP
MAIN-P.W.Board			<a href="#">Q2302</a>	48T25317Y01	TR,XN0F256-TX -CP
MAIN-P.W.Board			<a href="#">Q2303</a>	48T25317Y01	TR,XN0F256-TX -CP
MAIN-P.W.Board			<a href="#">Q2402</a>	48T62967F02	TR,DTC114EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q2403</a>	48T62967F03	TR,DTC124EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q2404</a>	48T75205Y01	TR,FMC2A-T148 -CP
MAIN-P.W.Board			<a href="#">Q2405</a>	48T62967F02	TR,DTC114EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q2406</a>	48T62967F03	TR,DTC124EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q3201</a>	48T62967F03	TR,DTC124EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q3301</a>	48T62966F01	TR,DTA143EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q5101</a>	48T62967F02	TR,DTC114EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q5201</a>	48T62967F03	TR,DTC124EKA-T146-CP

MAIN-P.W.Board			<a href="#">Q5202</a>	48T75205Y02	TR,FMC3A-T148 -CP
MAIN-P.W.Board			<a href="#">Q5203</a>	48T75205Y01	TR,FMC2A-T148 -CP
MAIN-P.W.Board			<a href="#">Q5501</a>	48T75205Y02	TR,FMC3A-T148 -CP
MAIN-P.W.Board			<a href="#">Q5502</a>	48T62967F03	TR,DTC124EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q6050</a>	48T15141W03	TR ,2SB1184F5 -E5
MAIN-P.W.Board			<a href="#">Q6051</a>	48T94606F17	TR,DTC123YUA-T106-CP
MAIN-P.W.Board			<a href="#">Q6201</a>	48T65619Y01	FET,HN1K06FU-85L -CP
MAIN-P.W.Board			<a href="#">Q6301</a>	48-09583Z04	TR,KTA1504S-GRRTK-CP
MAIN-P.W.Board			<a href="#">Q6302</a>	48T62967F05	TR,DTC143XKA-T146-CP
MAIN-P.W.Board			<a href="#">Q6501</a>	48T94606F56	TR,DTA114EUA-T106-CP
MAIN-P.W.Board			<a href="#">Q8201</a>	48-09583Z04	TR,KTA1504S-GRRTK-CP
MAIN-P.W.Board			<a href="#">Q8202</a>	48T62967F02	TR,DTC114EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q8301</a>	48-09581Z04	TR,KTA1505S-GRRTK-CP
MAIN-P.W.Board			<a href="#">Q8302</a>	48T62967F01	TR,DTC143EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q8401</a>	48-09581Z04	TR,KTA1505S-GRRTK-CP
MAIN-P.W.Board			<a href="#">Q8402</a>	48T62967F01	TR,DTC143EKA-T146-CP
MAIN-P.W.Board			<a href="#">Q8601</a>	48T45594W08	TR ,XN1212 -TX-CP
MAIN-P.W.Board			<a href="#">Q8801</a>	48T45594W08	TR ,XN1212 -TX-CP
MAIN-P.W.Board			<a href="#">R1002</a>	06S15593Y97	RES,RK 104F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1003</a>	06S15593Y97	RES,RK 104F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1004</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1005</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1006</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1008</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1009</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1010</a>	06S55361Y17	RES,RK 10RJ 1/4 -CP
MAIN-P.W.Board			<a href="#">R1012</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1013</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1014</a>	06S55361Y49	RES,RK 221J 1/4 -CP
MAIN-P.W.Board			<a href="#">R1201</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1202</a>	06S15593Y41	RES,RK 471F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1203</a>	06S15593Y41	RES,RK 471F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1204</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1205</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1206</a>	06S15593Y73	RES,RK 103F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1207</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R1208</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R1209</a>	06S15594Y14	RES,RK 474F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1210</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R1211</a>	06S15593Y89	RES,RK 473F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2102</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2103</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2301</a>	06S15593Y94	RES,RK 753F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2302</a>	06S15593Y94	RES,RK 753F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2303</a>	06S55361Y49	RES,RK 221J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2304</a>	06S55361Y49	RES,RK 221J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2305</a>	06S55361Y41	RES,RK 101J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2306</a>	06S55361Y41	RES,RK 101J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2307</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2308</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2309</a>	06S55361Y41	RES,RK 101J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2310</a>	06S55361Y41	RES,RK 101J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2311</a>	06S15593Y94	RES,RK 753F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2312</a>	06S15593Y94	RES,RK 753F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2313</a>	06S55361Y49	RES,RK 221J 1/4 -CP



MAIN-P.W.Board			<a href="#">R2314</a>	06S55361Y49	RES,RK 221J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2315</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2316</a>	06S55361Y41	RES,RK 101J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2317</a>	06S55361Y41	RES,RK 101J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2318</a>	06S15593Y94	RES,RK 753F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2319</a>	06S15593Y94	RES,RK 753F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2320</a>	06S55361Y49	RES,RK 221J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2321</a>	06S55361Y49	RES,RK 221J 1/4 -CP
MAIN-P.W.Board			<a href="#">R2401</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2402</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R2403</a>	06S15593Y77	RES,RK 153F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2404</a>	06S15593Y89	RES,RK 473F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2405</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2406</a>	06S15593Y73	RES,RK 103F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2407</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2408</a>	06S15593Y73	RES,RK 103F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2601</a>	06S15593Y73	RES,RK 103F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2801</a>	06S15593Y73	RES,RK 103F 1/10 -CP
MAIN-P.W.Board			<a href="#">R2802</a>	06S15593Y73	RES,RK 103F 1/10 -CP
MAIN-P.W.Board			<a href="#">R3101</a>	06S35083Y29	RES,RK 222F 1/4 -CP
MAIN-P.W.Board			<a href="#">R3102</a>	06S35083Y33	RES,RK 472F 1/4 -CP
MAIN-P.W.Board			<a href="#">R3201</a>	06S55361Y89	RES,RK 103J 1/4 -CP
MAIN-P.W.Board			<a href="#">R3202</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R3301</a>	06S55361Y89	RES,RK 103J 1/4 -CP
MAIN-P.W.Board			<a href="#">R3303</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R3404</a>	06S55361Y89	RES,RK 103J 1/4 -CP
MAIN-P.W.Board			<a href="#">R5001</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5002</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5003</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5004</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5005</a>	06S15594Y14	RES,RK 474F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5007</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5009</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5010</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5011</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5012</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5014</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5015</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5016</a>	06S15593Y89	RES,RK 473F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5017</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5018</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5019</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5020</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5021</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5024</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5025</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5026</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5027</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5029</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5032</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R5033</a>	06S35083Y17	RES,RK 221F 1/4 -CP
MAIN-P.W.Board			<a href="#">R5034</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5035</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5036</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5037</a>	06S15593Y25	RES,RK 101F 1/10 -CP

MAIN-P.W.Board			<a href="#">R5038</a>	06S55365Y97	RES,RK 223J 1/10 -CP
MAIN-P.W.Board			<a href="#">R5039</a>	06S55366Y06	RES,RK 473J 1/10 -CP
MAIN-P.W.Board			<a href="#">R5040</a>	06S15593Y73	RES,RK 103F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5042</a>	06S15593Y73	RES,RK 103F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5045</a>	06S55365Y97	RES,RK 223J 1/10 -CP
MAIN-P.W.Board			<a href="#">R5046</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5047</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5048</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5049</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5050</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5051</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5052</a>	06S15593Y57	RES,RK 222F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5053</a>	06S55365Y97	RES,RK 223J 1/10 -CP
MAIN-P.W.Board			<a href="#">R5054</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5055</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5056</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5057</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5101</a>	06S55363Y89	RES,RK 103J 1/8 -CP
MAIN-P.W.Board			<a href="#">R5102</a>	06S35083Y25	RES,RK 102F 1/4 -CP
MAIN-P.W.Board			<a href="#">R5201</a>	06S15593Y63	RES,RK 392F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5202</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5203</a>	06S15593Y59	RES,RK 272F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5205</a>	06S35083Y45	RES,RK 473F 1/4 -CP
MAIN-P.W.Board			<a href="#">R5207</a>	06S35083Y42	RES,RK 273F 1/4 -CP
MAIN-P.W.Board			<a href="#">R5301</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5302</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5303</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5304</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5305</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5306</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5307</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5308</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5309</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5310</a>	06S15594Y14	RES,RK 474F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5311</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5312</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R5313</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R5314</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5315</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5316</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5317</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5318</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5402</a>	06S35083Y25	RES,RK 102F 1/4 -CP
MAIN-P.W.Board			<a href="#">R5403</a>	06S55363Y65	RES,RK 102J 1/8 -CP
MAIN-P.W.Board			<a href="#">R5404</a>	06S55363Y65	RES,RK 102J 1/8 -CP
MAIN-P.W.Board			<a href="#">R5405</a>	06S35083Y37	RES,RK 103F 1/4 -CP
MAIN-P.W.Board			<a href="#">R5406</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5407</a>	06S55363Y65	RES,RK 102J 1/8 -CP
MAIN-P.W.Board			<a href="#">R5408</a>	06S55363Y65	RES,RK 102J 1/8 -CP
MAIN-P.W.Board			<a href="#">R5409</a>	06S35083Y25	RES,RK 102F 1/4 -CP
MAIN-P.W.Board			<a href="#">R5410</a>	06S55363Y65	RES,RK 102J 1/8 -CP
MAIN-P.W.Board			<a href="#">R5411</a>	06S35083Y25	RES,RK 102F 1/4 -CP
MAIN-P.W.Board			<a href="#">R5413</a>	06S55363Y65	RES,RK 102J 1/8 -CP
MAIN-P.W.Board			<a href="#">R5501</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5502</a>	06S15593Y73	RES,RK 103F 1/10 -CP




MAIN-P.W.Board			<a href="#">R5503</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R5504</a>	06S15593Y25	RES,RK 101F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6001</a>	06S15593Y89	RES,RK 473F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6002</a>	06S55361Y65	RES,RK 102J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6003</a>	06S55361Y65	RES,RK 102J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6004</a>	06S55361Y65	RES,RK 102J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6005</a>	06S45348Y34	RES,RK 304F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6006</a>	06S15594Y07	RES,RK 244F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6007</a>	06S15593Y89	RES,RK 473F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6008</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R6009</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6010</a>	06S35083Y25	RES,RK 102F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6011</a>	06S35083Y25	RES,RK 102F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6012</a>	06S35083Y25	RES,RK 102F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6050</a>	06S55361Y69	RES,RK 152J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6051</a>	06S55361Y72	RES,RK 202J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6052</a>	06S55361Y71	RES,RK 182J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6053</a>	06S55361Y70	RES,RK 162J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6054</a>	06S55361Y98	RES,RK 243J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6101</a>	06S45348Y38	RES,RK 474F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6102</a>	06S45348Y38	RES,RK 474F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6103</a>	06S35083Y37	RES,RK 103F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6104</a>	06S35083Y37	RES,RK 103F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6105</a>	06S35083Y25	RES,RK 102F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6106</a>	06S35083Y25	RES,RK 102F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6201</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6202</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6203</a>	06S55361Y63	RES,RK 821J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6204</a>	06S55361Y63	RES,RK 821J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6205</a>	06S55361Y41	RES,RK 101J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6206</a>	06S55361Y41	RES,RK 101J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6301</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6302</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6305</a>	06S55361Y41	RES,RK 101J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6306</a>	06S15593Y61	RES,RK 332F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6307</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6308</a>	06S15593Y57	RES,RK 222F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6401</a>	06S55361Y51	RES,RK 271J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6402</a>	06S55361Y51	RES,RK 271J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6501</a>	06S55361Y17	RES,RK 10RJ 1/4 -CP
MAIN-P.W.Board			<a href="#">R6502</a>	06S55361Y46	RES,RK 161J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6503</a>	06S55361Y46	RES,RK 161J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6504</a>	06S55361Y46	RES,RK 161J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6505</a>	06S55361Y46	RES,RK 161J 1/4 -CP
MAIN-P.W.Board			<a href="#">R6506</a>	06S15593Y69	RES,RK 682F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6507</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6508</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6509</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6510</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6511</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6512</a>	06S15593Y65	RES,RK 472F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6515</a>	06S15593Y57	RES,RK 222F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6516</a>	06S15593Y57	RES,RK 222F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6517</a>	06S15593Y53	RES,RK 152F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6518</a>	06S15593Y53	RES,RK 152F 1/10 -CP

MAIN-P.W.Board			<a href="#">R6801</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6802</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6803</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6804</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6805</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6806</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6807</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6808</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6809</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6810</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6811</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6812</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6813</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6814</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6815</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6816</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6817</a>	06S15593Y69	RES,RK 682F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6818</a>	06S15593Y69	RES,RK 682F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6819</a>	06S15593Y69	RES,RK 682F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6820</a>	06S15593Y69	RES,RK 682F 1/10 -CP
MAIN-P.W.Board			<a href="#">R6821</a>	06S35083Y19	RES,RK 331F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6822</a>	06S35083Y19	RES,RK 331F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6823</a>	06S35083Y19	RES,RK 331F 1/4 -CP
MAIN-P.W.Board			<a href="#">R6824</a>	06S35083Y19	RES,RK 331F 1/4 -CP
MAIN-P.W.Board			<a href="#">R8001</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8004</a>	06S15593Y85	RES,RK 333F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8005</a>	06S15593Y83	RES,RK 273F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8006</a>	06S15593Y67	RES,RK 562F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8009</a>	06S55366Y14	RES,RK 104J 1/10 -CP
MAIN-P.W.Board			<a href="#">R8011</a>	06S55366Y11	RES,RK 753J 1/10 -CP
MAIN-P.W.Board			<a href="#">R8012</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R8103</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R8201</a>	06S15593Y82	RES,RK 243F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8202</a>	06S15593Y57	RES,RK 222F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8301</a>	06S15593Y82	RES,RK 243F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8302</a>	06S15593Y51	RES,RK 122F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8303</a>	06S15593Y89	RES,RK 473F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8401</a>	06S35083Y27	RES,RK 152F 1/4 -CP
MAIN-P.W.Board			<a href="#">R8402</a>	06S15593Y82	RES,RK 243F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8403</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R8601</a>	06S15594Y10	RES,RK 334F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8602</a>	06S15593Y87	RES,RK 393F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8603</a>	06S15594Y02	RES,RK 154F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8604</a>	06S15593Y90	RES,RK 513F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8605</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R8606</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8607</a>	06S15594Y02	RES,RK 154F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8608</a>	06S15593Y76	RES,RK 133F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8609</a>	06S15593Y92	RES,RK 623F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8610</a>	06S35083Y16	RES,RK 181F 1/4 -CP
MAIN-P.W.Board			<a href="#">R8612</a>	06S35083Y16	RES,RK 181F 1/4 -CP
MAIN-P.W.Board			<a href="#">R8613</a>	06S35083Y16	RES,RK 181F 1/4 -CP
MAIN-P.W.Board			<a href="#">R8801</a>	06S15593Y94	RES,RK 753F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8802</a>	06S15593Y49	RES,RK 102F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8803</a>	06S15593Y82	RES,RK 243F 1/10 -CP

MAIN-P.W.Board			<a href="#">R8804</a>	06S15594Y23	RES,RK JUMPER1/10-CP
MAIN-P.W.Board			<a href="#">R8806</a>	06S15593Y74	RES,RK 113F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8807</a>	06S15593Y87	RES,RK 393F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8808</a>	06S15593Y92	RES,RK 623F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8809</a>	06S15594Y02	RES,RK 154F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8811</a>	06S35083Y13	RES,RK 101F 1/4 -CP
MAIN-P.W.Board			<a href="#">R8901</a>	06S15593Y41	RES,RK 471F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8902</a>	06S15593Y69	RES,RK 682F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8903</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8904</a>	06S15593Y29	RES,RK 151F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8905</a>	06S15593Y75	RES,RK 123F 1/10 -CP
MAIN-P.W.Board			<a href="#">R8906</a>	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board			<a href="#">SA1001</a>	48-00954Z01	VST,CSA30C201M-T -CP
MAIN-P.W.Board			<a href="#">SD2601</a>	48T95572W01	DIO,SHT MA736-TX -E1
MAIN-P.W.Board			<a href="#">SD2602</a>	48T95572W01	DIO,SHT MA736-TX -E1
MAIN-P.W.Board			<a href="#">SD8601</a>	48T45286Y01	DIO,SHT RB050L-40-E1
MAIN-P.W.Board			<a href="#">SD8801</a>	48T45286Y01	DIO,SHT RB050L-40-E1
MAIN-P.W.Board			<a href="#">SW2801</a>	40T15452Y01	SW,SLIDE SLD-62-724X
MAIN-P.W.Board			<a href="#">SW2802</a>	40T15452Y01	SW,SLIDE SLD-62-724X
MAIN-P.W.Board			<a href="#">SW5201</a>	40T16096W03	SW ,TACT SKHHLW
MAIN-P.W.Board			<a href="#">T3001</a>	25-11260Z01	CHOKE,OLC-UB2636-1DB
MAIN-P.W.Board			<a href="#">TU1001</a>	TU-04072Z04	TUNER,TFTE1E113B
MAIN-P.W.Board			<a href="#">VR8601</a>	18T25282Y28	VAR,EVM3VSX50 104-CP
MAIN-P.W.Board			<a href="#">VR8801</a>	18T25282Y28	VAR,EVM3VSX50 104-CP
MAIN-P.W.Board			<a href="#">VT1001</a>	24T35286Y01	IND,MG56 523J -DB
MAIN-P.W.Board			<a href="#">XL1201</a>	91-04265Z09	XTL,AT-51CD2 4.3M-E7
MAIN-P.W.Board			<a href="#">XL5001</a>	91T95554W01	XTL,CM200S 32.76K-E5
MAIN-P.W.Board			<a href="#">XL5002</a>	91-04265Z48	XTL,AT-51CD2 6.0M-E7
MAIN-P.W.Board			<a href="#">XL6501</a>	91-04265Z02	XTL,AT-51CD2 4.0M-E7
MAIN-P.W.Board			<a href="#">Z5001</a>	91T65112W06	EMI,BK2125HM102 -CP
MAIN-P.W.Board			<a href="#">Z5002</a>	91T65112W06	EMI,BK2125HM102 -CP
MAIN-P.W.Board			<a href="#">Z5003</a>	91T65112W06	EMI,BK2125HM102 -CP
MAIN-P.W.Board			<a href="#">ZD3001</a>	48-02592Z01	DIO,ZEN Z5W27VJ -EA
MAIN-P.W.Board			<a href="#">ZD5201</a>	48-01607Z22	DIO,ZEN LUDZ6.2B -CP
MAIN-P.W.Board			<a href="#">ZD6001</a>	48-01607Z19	DIO,ZEN LUDZ5.6B -CP
MAIN-P.W.Board			<a href="#">ZD6002</a>	48-01607Z19	DIO,ZEN LUDZ5.6B -CP
MAIN-P.W.Board			<a href="#">ZD6501</a>	48-01607Z19	DIO,ZEN LUDZ5.6B -CP
MAIN-P.W.Board			<a href="#">ZD6502</a>	48T35392Y06	DIO,ZEN RLZ7.5A -CP
MAIN-P.W.Board			<a href="#">ZD6503</a>	48T35392Y06	DIO,ZEN RLZ7.5A -CP
DIGI-P.W.Board			<a href="#">C7000</a>	08S65667Y05	CAP,CER 105KX5R1A-CP
DIGI-P.W.Board			<a href="#">C7001</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7002</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7003</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7004</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7005</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7006</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7007</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7008</a>	08S45232Y11	CAP,CER 103K-B1C -CP
DIGI-P.W.Board			<a href="#">C7009</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7010</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7011</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7012</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7013</a>	08S45232Y11	CAP,CER 103K-B1C -CP
DIGI-P.W.Board			<a href="#">C7014</a>	08S45231Y10	CAP,CER 7R0D-CH1H-CP
DIGI-P.W.Board			<a href="#">C7015</a>	08S45231Y10	CAP,CER 7R0D-CH1H-CP





DIGI-P.W.Board			<a href="#">C7201</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7202</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7203</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7204</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7205</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7206</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7207</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7208</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7209</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7210</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7211</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7212</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7300</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7301</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7302</a>	08S45231Y08	CAP,CER 5R0C-CH1H-CP
DIGI-P.W.Board			<a href="#">C7303</a>	08S45231Y08	CAP,CER 5R0C-CH1H-CP
DIGI-P.W.Board			<a href="#">C7304</a>	08S45232Y11	CAP,CER 103K-B1C -CP
DIGI-P.W.Board			<a href="#">C7400</a>	08S45231Y38	CAP,CER 102J-CH1E-CP
DIGI-P.W.Board			<a href="#">C7401</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7402</a>	08S45231Y38	CAP,CER 102J-CH1E-CP
DIGI-P.W.Board			<a href="#">C7403</a>	08S35374W12	CAP,CER 106K-B0J -CP
DIGI-P.W.Board			<a href="#">C7404</a>	08S35374W12	CAP,CER 106K-B0J -CP
DIGI-P.W.Board			<a href="#">C7405</a>	08S35374W12	CAP,CER 106K-B0J -CP
DIGI-P.W.Board			<a href="#">C7406</a>	08S35349Y12	CAP,CER 105K-B0J -CP
DIGI-P.W.Board			<a href="#">C7501</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7504</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7506</a>	08S45231Y14	CAP,CER 12RJ-CH1H-CP
DIGI-P.W.Board			<a href="#">C7507</a>	08S45231Y14	CAP,CER 12RJ-CH1H-CP
DIGI-P.W.Board			<a href="#">C7600</a>	08S45232Y17	CAP,CER 104K-B0J -CP
DIGI-P.W.Board			<a href="#">C7601</a>	08S45232Y13	CAP,CER 223K-B1C -CP
DIGI-P.W.Board			<a href="#">C7602</a>	08S45232Y11	CAP,CER 103K-B1C -CP
DIGI-P.W.Board			<a href="#">C7603</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7800</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7801</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7802</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7803</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7804</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7805</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7806</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7807</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7808</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7809</a>	08S45231Y25	CAP,CER 101J-CH1H-CP
DIGI-P.W.Board			<a href="#">C7900</a>	08S65667Y05	CAP,CER 105KX5R1A-CP
DIGI-P.W.Board			<a href="#">C7901</a>	08S60102F48	CAP,CER 105K-B1E -CP
DIGI-P.W.Board			<a href="#">C7902</a>	08S35349Y12	CAP,CER 105K-B0J -CP
DIGI-P.W.Board			<a href="#">C7903</a>	08S35349Y12	CAP,CER 105K-B0J -CP
DIGI-P.W.Board			<a href="#">C7904</a>	08S45232Y13	CAP,CER 223K-B1C -CP
DIGI-P.W.Board			<a href="#">C7905</a>	08S45232Y13	CAP,CER 223K-B1C -CP
DIGI-P.W.Board			<a href="#">CB7600</a>	09-11455Z01	SKT,YKF45-0039N -DB
DIGI-P.W.Board			<a href="#">CB7800</a>	09T75225Y40	FFC,51374-4093 -ER
DIGI-P.W.Board			<a href="#">CB7900</a>	09T75225Y40	FFC,51374-4093 -ER
DIGI-P.W.Board			<a href="#">D7600</a>	48-08988Z01	VST,EZJZ0V800AA -CP
DIGI-P.W.Board			<a href="#">D7601</a>	48-08988Z01	VST,EZJZ0V800AA -CP
DIGI-P.W.Board			<a href="#">E7000</a>	23S75244Y04	CAP,ELY 221-0J -E6
DIGI-P.W.Board			<a href="#">E7001</a>	23S75244Y04	CAP,ELY 221-0J -E6


DIGI-P.W.Board			<a href="#">E7400</a>	23S75244Y25	CAP,ELY 22R-1E -E3
DIGI-P.W.Board			<a href="#">E7600</a>	23S75244Y04	CAP,ELY 221-0J -E6
DIGI-P.W.Board			<a href="#">E7601</a>	23S75244Y19	CAP,ELY 101-1C -E6
DIGI-P.W.Board			<a href="#">IC7001</a>	51T15185Y02	TC7SH08FU,JF-L -CP
DIGI-P.W.Board			<a href="#">IC7002</a>	51-10836Z01	R5S72630P200FPV -QT
DIGI-P.W.Board			<a href="#">IC7100</a>	53-13299Z29	OFL, V0.998MRAL702AAF1
DIGI-P.W.Board			<a href="#">IC7101</a>	53-13299Z30	OFL, V0.998MRAL702AAF2
DIGI-P.W.Board			<a href="#">IC7200</a>	51-12212Z01	MT48LC2M32B2P-7IT-ST
DIGI-P.W.Board			<a href="#">IC7300</a>	51-09817Z01	V112_V1-00 -LE6
DIGI-P.W.Board			<a href="#">IC7400</a>	51-09404Z01	PCM1754DBQR -SE2
DIGI-P.W.Board			<a href="#">IC7500</a>	51T15185Y02	TC7SH08FU,JF-L -CP
DIGI-P.W.Board			<a href="#">IC7501</a>	51T35039Y01	TC7SU04FU-TE85L -CP
DIGI-P.W.Board			<a href="#">IC7600</a>	51-07917Z01	BD6519FJ-E2 -SE2
DIGI-P.W.Board			<a href="#">IC7900</a>	51-09524Z01	LT3491ESC8 -CP
DIGI-P.W.Board			<a href="#">L7000</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7001</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7002</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7003</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7004</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7100</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7200</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7400</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7800</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7900</a>	24T95456W27	FBI,BLM18PG181SH1-CP
DIGI-P.W.Board			<a href="#">L7902</a>	24-09343Z01	IND,LQH2MCN 10RK -CP
DIGI-P.W.Board			<a href="#">Q7500</a>	48T75205Y01	TR,FMC2A-T148 -CP
DIGI-P.W.Board			<a href="#">R7000</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7001</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7003</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7006</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7007</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7008</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7010</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7011</a>	06S65415Y41	RES,RK 223F 1/16 -CP
DIGI-P.W.Board			<a href="#">R7012</a>	06S15615Y73	RES,RK 103J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7013</a>	06S15615Y73	RES,RK 103J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7014</a>	06S15615Y73	RES,RK 103J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7015</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7016</a>	06S15615Y37	RES,RK 331J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7018</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7019</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7020</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7022</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7023</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7024</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7025</a>	06S15615Y65	RES,RK 472J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7028</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7030</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7031</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7032</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7033</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7034</a>	06S15615Y37	RES,RK 331J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7036</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7038</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7039</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP

DIGI-P.W.Board			<a href="#">R7040</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7041</a>	06S15615Y65	RES,RK 472J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7042</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7043</a>	06S15615Y37	RES,RK 331J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7045</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7047</a>	06S15615Y65	RES,RK 472J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7048</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7049</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7050</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7051</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7052</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7053</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7054</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7055</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7056</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7057</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7058</a>	06S15615Y17	RES,RK 47RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7059</a>	06S15615Y49	RES,RK 102J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7060</a>	06S15615Y49	RES,RK 102J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7061</a>	06S15616Y23	RES,RK JUMPER1/16-CP
DIGI-P.W.Board			<a href="#">R7062</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7063</a>	06S15616Y23	RES,RK JUMPER1/16-CP
DIGI-P.W.Board			<a href="#">R7064</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7065</a>	06S15616Y23	RES,RK JUMPER1/16-CP
DIGI-P.W.Board			<a href="#">R7066</a>	06S15616Y23	RES,RK JUMPER1/16-CP
DIGI-P.W.Board			<a href="#">R7067</a>	06S15615Y57	RES,RK 222J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7072</a>	06S65415Y34	RES,RK 562F 1/16 -CP
DIGI-P.W.Board			<a href="#">R7073</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7074</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7075</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7076</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7082</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7083</a>	06S15616Y22	RES,RK 105J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7084</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7085</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7087</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7088</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7089</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7090</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7091</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7092</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7093</a>	06S15615Y65	RES,RK 472J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7094</a>	06S15615Y65	RES,RK 472J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7095</a>	06S15615Y65	RES,RK 472J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7096</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7097</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7098</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7100</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7101</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7102</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7103</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7104</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7105</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7106</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7107</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP








DIGI-P.W.Board			<a href="#">R7501</a>	06S15615Y89	RES,RK 473J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7502</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7503</a>	06S15615Y37	RES,RK 331J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7504</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7505</a>	06S15615Y25	RES,RK 101J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7507</a>	06S15594Y23	RES,RK JUMPER1/10-CP
DIGI-P.W.Board			<a href="#">R7600</a>	06S15615Y65	RES,RK 472J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7601</a>	06S55361Y97	RES,RK 223J 1/4 -CP
DIGI-P.W.Board			<a href="#">R7602</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7603</a>	06S15615Y13	RES,RK 33RJ 1/16 -CP
DIGI-P.W.Board			<a href="#">R7800</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7802</a>	06S15615Y81	RES,RK 223J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7900</a>	06S65415Y02	RES,RK 12RF 1/16 -CP
DIGI-P.W.Board			<a href="#">R7902</a>	06S65415Y49	RES,RK 104F 1/16 -CP
DIGI-P.W.Board			<a href="#">R7903</a>	06S65415Y49	RES,RK 104F 1/16 -CP
DIGI-P.W.Board			<a href="#">R7904</a>	06S15615Y33	RES,RK 221J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7905</a>	06S15615Y31	RES,RK 181J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7906</a>	06S15615Y65	RES,RK 472J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7907</a>	06S15615Y31	RES,RK 181J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7908</a>	06S15615Y31	RES,RK 181J 1/16 -CP
DIGI-P.W.Board			<a href="#">R7912</a>	06S15594Y23	RES,RK JUMPER1/10-CP
DIGI-P.W.Board			<a href="#">RA7000</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7001</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7002</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7004</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7008</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7009</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7010</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7011</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7012</a>	06S15771Y41	RES,ARYEXB28V223J-CP
DIGI-P.W.Board			<a href="#">RA7014</a>	06S15771Y41	RES,ARYEXB28V223J-CP
DIGI-P.W.Board			<a href="#">RA7015</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7016</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7017</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7018</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7100</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7101</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7102</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7103</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7104</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7105</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7106</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7107</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7108</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7109</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7110</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7111</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7112</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7113</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7114</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7115</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7116</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7117</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7118</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7119</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP

DIGI-P.W.Board			<a href="#">RA7203</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7207</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7209</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7210</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7211</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7212</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7213</a>	06S15771Y07	RES,ARYEXB28V33RJ-CP
DIGI-P.W.Board			<a href="#">RA7900</a>	06S15771Y16	RES,ARYEXB28V181J-CP
DIGI-P.W.Board			<a href="#">RA7901</a>	06S15771Y16	RES,ARYEXB28V181J-CP
DIGI-P.W.Board			<a href="#">RA7902</a>	06S15771Y16	RES,ARYEXB28V181J-CP
DIGI-P.W.Board			<a href="#">RA7903</a>	06S15771Y16	RES,ARYEXB28V181J-CP
DIGI-P.W.Board			<a href="#">SD7000</a>	48-09587Z01	DIO,SHT KDR728E -CP
DIGI-P.W.Board			<a href="#">SD7001</a>	48-09587Z01	DIO,SHT KDR728E -CP
DIGI-P.W.Board			<a href="#">XL7000</a>	91T55274Y06	XTL,NX5032GA 16.5-E2
DIGI-P.W.Board			<a href="#">XL7001</a>	91T55274Y29	XTL,NX5032GA 48.0-E2
DIGI-P.W.Board			<a href="#">XL7300</a>	91T95554W01	XTL,CM200S 32.76K-E5
DIGI-P.W.Board			<a href="#">XL7500</a>	91T55217Y01	XTL,NX8045GB 16.9-E5
DIGI-P.W.Board			<a href="#">Z7000</a>	91T65123Y02	EMI,DLW21SN900SQ2-CP
FRONT-P.W.Board			<a href="#">C4103</a>	08S35349Y11	CAP,CER 223K-B1H -CP
FRONT-P.W.Board			<a href="#">C4301</a>	08S35349Y16	CAP,CER 105K-B1A -CP
FRONT-P.W.Board			<a href="#">C4401</a>	08S35349Y11	CAP,CER 223K-B1H -CP
FRONT-P.W.Board			<a href="#">C4501</a>	08S35349Y16	CAP,CER 105K-B1A -CP
FRONT-P.W.Board			<a href="#">C4502</a>	08S35349Y11	CAP,CER 223K-B1H -CP
FRONT-P.W.Board			<a href="#">CH4401</a>	09-05559Z01	BTB,DF15-P -B
FRONT-P.W.Board			<a href="#">D4301</a>	48T85357W01	DIO,1PS226 -CP
FRONT-P.W.Board			<a href="#">IC4101</a>	51T25238Y04	TC7SH32FU,JF-L -CP
FRONT-P.W.Board			<a href="#">IC4301</a>	51-01707Z01	RS-771 -NE2
FRONT-P.W.Board			<a href="#">IC4501</a>	51T93332F02	NJM2903V-TE2 -SE2
FRONT-P.W.Board			<a href="#">LD4101</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4102</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4103</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4104</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4105</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4106</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4107</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4108</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4109</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4110</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4111</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4112</a>	48-11416Z02	LED,BLU SSB-ULD-WXCP
FRONT-P.W.Board			<a href="#">LD4113</a>	48-11416Z02	LED,BLU SSB-ULD-WXCP
FRONT-P.W.Board			<a href="#">LD4114</a>	48-11416Z02	LED,BLU SSB-ULD-WXCP
FRONT-P.W.Board			<a href="#">LD4115</a>	48-11416Z02	LED,BLU SSB-ULD-WXCP
FRONT-P.W.Board			<a href="#">LD4116</a>	48-11137Z01	LED,BLU UB1116W -CP
FRONT-P.W.Board			<a href="#">LD4117</a>	48-11137Z01	LED,BLU UB1116W -CP
FRONT-P.W.Board			<a href="#">LD4118</a>	48-11137Z01	LED,BLU UB1116W -CP
FRONT-P.W.Board			<a href="#">LD4119</a>	48-11137Z01	LED,BLU UB1116W -CP
FRONT-P.W.Board			<a href="#">LD4120</a>	48-11137Z01	LED,BLU UB1116W -CP
FRONT-P.W.Board			<a href="#">LD4121</a>	48-11137Z01	LED,BLU UB1116W -CP
FRONT-P.W.Board			<a href="#">LD4122</a>	48-11415Z01	LED,RED KPT-1608S-CP
FRONT-P.W.Board			<a href="#">LD4123</a>	48-11416Z02	LED,BLU SSB-ULD-WXCP
FRONT-P.W.Board			<a href="#">LD4124</a>	48-11137Z01	LED,BLU UB1116W -CP
FRONT-P.W.Board			<a href="#">LD4127</a>	48-11946Z01	LED,WHT SMLZ13WBD-CP
FRONT-P.W.Board			<a href="#">Q4101</a>	48T63417F01	TR,2SC2412K-96 -CP
FRONT-P.W.Board			<a href="#">Q4102</a>	48T63417F01	TR,2SC2412K-96 -CP

FRONT-P.W.Board			<a href="#">Q4103</a>	48T62967F25	TR,DTC123JKA-T146-CP
FRONT-P.W.Board			<a href="#">Q4104</a>	48T63788F04	TR,2SD1328-T-TX -CP
FRONT-P.W.Board			<a href="#">Q4105</a>	48T63788F04	TR,2SD1328-T-TX -CP
FRONT-P.W.Board			<a href="#">Q4550</a>	48T75205Y02	TR,FMC3A-T148 -CP
FRONT-P.W.Board			<a href="#">Q4551</a>	48T94606F51	TR,DTA144EUA-T106-CP
FRONT-P.W.Board			<a href="#">R4001</a>	06S35083Y29	RES,RK 222F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4002</a>	06S35083Y32	RES,RK 392F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4003</a>	06S35083Y36	RES,RK 822F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4004</a>	06S35083Y42	RES,RK 273F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4005</a>	06S35083Y29	RES,RK 222F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4006</a>	06S35083Y32	RES,RK 392F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4007</a>	06S35083Y36	RES,RK 822F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4008</a>	06S35083Y29	RES,RK 222F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4009</a>	06S35083Y32	RES,RK 392F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4010</a>	06S35083Y36	RES,RK 822F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4011</a>	06S35083Y42	RES,RK 273F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4101</a>	06S55361Y64	RES,RK 911J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4102</a>	06S55361Y64	RES,RK 911J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4103</a>	06S55361Y63	RES,RK 821J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4104</a>	06S55361Y67	RES,RK 122J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4105</a>	06S55361Y63	RES,RK 821J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4106</a>	06S55361Y63	RES,RK 821J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4107</a>	06S55361Y56	RES,RK 431J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4108</a>	06S55361Y56	RES,RK 431J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4109</a>	06S55361Y64	RES,RK 911J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4110</a>	06S55361Y61	RES,RK 681J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4111</a>	06S55361Y53	RES,RK 331J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4112</a>	06S55361Y64	RES,RK 911J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4113</a>	06S55361Y76	RES,RK 302J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4114</a>	06S55361Y75	RES,RK 272J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4115</a>	06S55361Y61	RES,RK 681J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4116</a>	06S55361Y61	RES,RK 681J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4118</a>	06S15593Y49	RES,RK 102F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4119</a>	06S15593Y49	RES,RK 102F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4120</a>	06S55361Y59	RES,RK 561J 1/4 -CP
FRONT-P.W.Board			<a href="#">R4121</a>	06S15593Y57	RES,RK 222F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4122</a>	06S15593Y89	RES,RK 473F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4123</a>	06S15593Y57	RES,RK 222F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4124</a>	06S15593Y89	RES,RK 473F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4126</a>	06S15593Y41	RES,RK 471F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4127</a>	06S15593Y41	RES,RK 471F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4301</a>	06S35083Y13	RES,RK 101F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4406</a>	06S55363Y65	RES,RK 102J 1/8 -CP
FRONT-P.W.Board			<a href="#">R4407</a>	06S55363Y65	RES,RK 102J 1/8 -CP
FRONT-P.W.Board			<a href="#">R4408</a>	06S55363Y65	RES,RK 102J 1/8 -CP
FRONT-P.W.Board			<a href="#">R4410</a>	06S55363Y65	RES,RK 102J 1/8 -CP
FRONT-P.W.Board			<a href="#">R4411</a>	06S35083Y38	RES,RK 123F 1/4 -CP
FRONT-P.W.Board			<a href="#">R4503</a>	06S15593Y81	RES,RK 223F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4504</a>	06S15593Y73	RES,RK 103F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4505</a>	06S15593Y61	RES,RK 332F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4506</a>	06S15593Y59	RES,RK 272F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4507</a>	06S15593Y65	RES,RK 472F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4508</a>	06S15593Y49	RES,RK 102F 1/10 -CP
FRONT-P.W.Board			<a href="#">R4550</a>	06S15593Y73	RES,RK 103F 1/10 -CP
FRONT-P.W.Board			<a href="#">SW4001</a>	40T65353Y01	SW,TACT SKRSPACE010E2

FRONT-P.W.Board			<a href="#">SW4002</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4003</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4004</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4005</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4006</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4007</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4008</a>	40T35558Y09	SW,TACT SKPMAQE010E2
FRONT-P.W.Board			<a href="#">SW4009</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4010</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4011</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4012</a>	40T65353Y01	SW,TACT SKRSPACE010E2
FRONT-P.W.Board			<a href="#">SW4201</a>	40-10796Z01	ENC,EC35B154H401 -DB
Miscellaneous			<a href="#">ET6201</a>	09-09397Z01	ASSY,ANID-0057-01A
Miscellaneous			<a href="#">TFT7900</a>	65-09173Z01	ASSY,T-55150GD022JU

## Assembly Parts List

Model Code  
iDA-X100

NOTE: The part that has not PART NUMBER will not be supplied.

MODEL	Symbol No.	Parts No.	Description
	<a href="#">1</a>	13-11029Z02	NOSE,PIECE ASSY
	<a href="#">2</a>	-----	COVER,TOP
	<a href="#">3</a>	-----	CHAS,BASE
	<a href="#">5</a>	-----	BKT,REAR
	<a href="#">6</a>	-----	BKT,IC
	<a href="#">7</a>	03S60825Y09	SCR,B-T 3X6 ZN A
	<a href="#">8</a>	36A70327W01	KNOB,SLIDE
	<a href="#">11</a>	03S60822Y33	SCR,S-T 2.6X4.5 ZN A
	<a href="#">12</a>	03S60822Y12	SCR,S-T 2.6X6 ZN A
	<a href="#">13</a>	30-09543Z01	SML2CD-40X45.0-BD
	<a href="#">14</a>	SU-12554Z01	SERVICE_NOSE_X100(R)
	<a href="#">15</a>	-----	HEAT,SINK PWR
	<a href="#">16</a>	-----	HEAT,SINK SYS
	<a href="#">17</a>	03S60822Y19	SCR,S-T 2.6X10 ZN A
	<a href="#">18</a>	03S60822Y23	SCR,S-T 2.6X16 ZN A
	<a href="#">19</a>	64A51492W01	PLATE,SERIAL NO.
	<a href="#">20</a>	03S60822Y07	SCR,S-T 2.6X4 ZN A
	<a href="#">21</a>	07-03994Z01	BKT,SIDE L
	<a href="#">22</a>	07-03994Z02	BKT,SIDE R
	<a href="#">23</a>	13-11282Z01	NOSE,ESC ASSY
	<a href="#">24</a>	13-11043Z01	NOSE,BOTTOM
	<a href="#">25</a>	03S70693Y07	SCR,P-T 1.7X5 ZB A
	<a href="#">26</a>	36-11578Z01	KNOB,ROTARY ASSY
	<a href="#">27</a>	15-11045Z01	PLATE,ROTARY,ASSY
	<a href="#">28</a>	14-12148Z01	INS,LCD
	<a href="#">29</a>	07-11503Z01	BKT,LCD
	<a href="#">30</a>	15-09061Z01	CASE,SHIELD L
	<a href="#">31</a>	15-09062Z02	CASE,SHIELD R
	<a href="#">32</a>	03-02876Z28	SCR,WEV 1.7X7 ZB A
	<a href="#">ANT1001</a>	09-09398Z01	ASSY,ANID-0058-01A
	<a href="#">CB3001</a>	09T35473Y16	WTB,F169B001-16 -DB
	<a href="#">CB5401</a>	09-05560Z01	BTB,DF15-S -DB
	<a href="#">CB7600</a>	09-11455Z01	SKT,YKF45-0039N -DB
	<a href="#">CH4401</a>	09-05559Z01	BTB,DF15-P -B
	<a href="#">DIN6001</a>	09-05377Z01	DIN,TC7753-019117-DB
	<a href="#">DIN6401</a>	09T55071W11	CON,TCP9389-11 -DT
	<a href="#">ET6201</a>	09-09397Z01	ASSY,ANID-0057-01A
	<a href="#">JK2501</a>	09-11352Z01	RCA,YKC21-4816N -DB
	<a href="#">JK6301</a>	09T95460W01	JAC,HSJ0857-01-1010+
	<a href="#">SW4201</a>	40-10796Z01	ENC,EC35B154H401 -DB
	<a href="#">SW5201</a>	40T16096W03	SW ,TACT SKHHLW
	<a href="#">TFT7900</a>	65-09173Z01	ASSY,T-55150GD022JU
	<a href="#">TU1001</a>	TU-04072Z04	TUNER,TFTE1E113B